

GENERAL INSTRUCTIONS FOR USE

1. General overview of equipment:

Accessories shown in the illustrations may vary from model to model.

2. Hose connection:

Fit the hose inlet sleeve into the opening on the upper lid. Apply soft pressure and turn the inlet sleeve approximately half a turn to ensure it is firmly secured. Turn clockwise to lock, anti-clockwise to release.

3. Adjustment of strap position on support plate:

On the primary strap, the position of the strap can be adjusted for your individual comfort by moving the adjustment plate to the inner or outer position.

4. Adjustment of tension ties on the strap's support plate:

You can adjust the tension ties for your individual comfort. Form a loop with your finger, then move the tie through the clip forwards or backwards to the required length. Remove your finger. Tension the tie.

5. Adjusting the vacuum cleaner to sit comfortably on your back:

Pick up the vacuum cleaner. Put your arms through the shoulder straps. Snap the waist belt clip shut. Adjust the length. Snap the chest clip shut. Adjust the straps vertically by pulling down on both straps as shown in the picture.

6. Cord set:

The electric cable can be held in place on the belt by snapping the nylon tie around the coiled-up mains supply cable. Roll up the electric cable starting at the machine.

7. On/Off:

Plug the electric cable into the socket outlet. Press the power switch for ON or OFF.

8. Vacuum bag:

When the suction power diminishes, it is time to replace the vacuum bag. Check the bag frequently to make sure that you don't overfill. Release the latches on the upper lid. Lift up the lid from the container. Take hold of the cardboard part of the dust bag and carefully lift the bag out of the container. Dispose of the bag properly.

9. Cloth Bag filter:

When you replace the vacuum bag it can be a good idea to exchange or clean the cloth bag filter. This can be done after you have lifted out the vacuum bag. Clean the filter by shaking it well. Put the bag filter into place or exchange it with a new one if it's worn or damaged. Put a vacuum bag into place and replace the upper lid and close the latches.

10. Round Pre-filter:

Never vacuum without a pre-filter fitted into the machine. Once the pre-filter has been removed you can check and if necessary, replace the pre-filter. Release the two latches on the motor top. Remove the container and the upper lid. Place the new pre-filter in the center of the motor top. Lock both latches down.

11. Exhaust filter:

The filter cleans exhaust air from the vacuum cleaner. Check and change the exhaust filter frequently. Press the button downwards and open the cover. Fit the exhaust filter into the cover. Fasten to the lower edge of the cover. Close the cover.

12. 2-Piece Aluminum Wand:

The length can be adjusted by removing one or both sections of the wand until the proper length is found. Connection of bent end and handle grip: Push the handle grip into the bent end until it is properly fitted.

13. Hard/Soft Floor Tool:

One setting with brush (hard floors) and one without brush for rugs and carpet (soft floors).

14. Round Dusting Brush:

Useful tool for cleaning furniture, office equipment and HVAC vents.


15. Crevice Tool:

For cleaning tight spaces such as radiators, corners and joints.



RHINO CLEANING MACHINES

INSTRUCTION MANUAL

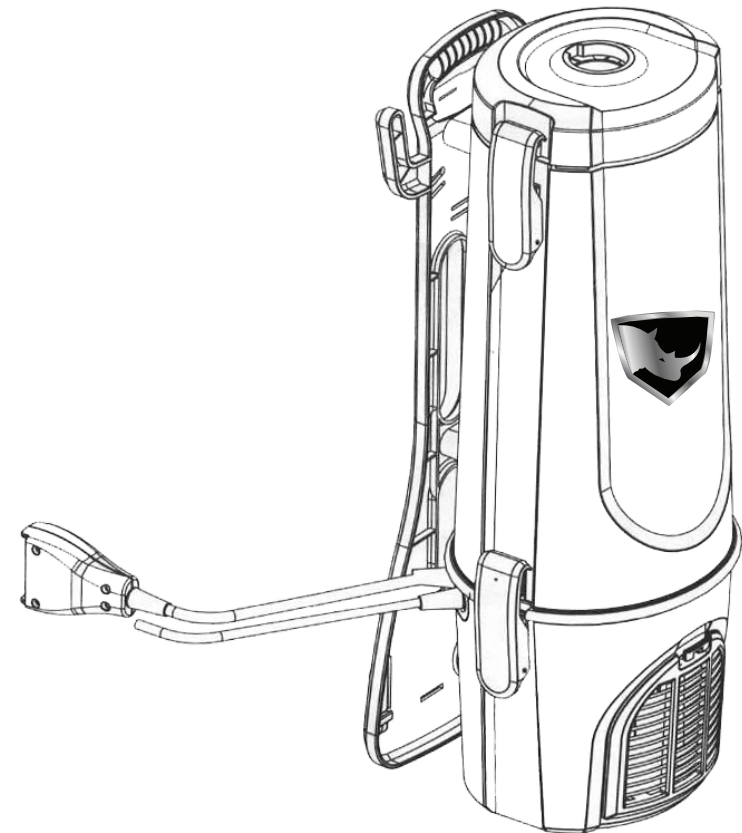

RHINO RV-BP1 BACKPACK VACUUM

Please read the instruction manual carefully before operation.



INCLUDES:

- 1 x 2-Piece Aluminum Wand (Part #: RHBP-WAND)
- 1 x Hard/Soft Floor Tool (Part #: RHBP-FLTOOL)
- 1 x Crevice Tool (Part #: RHBP-CREVTOOL)
- 1 x Round Dusting Brush (Part #: RHBP-BRUSH)
- 3 x Paper Vacuum Bag - 10PK (Part #: RHBP-PAPBAG)
- 1 x Cloth Bag/Filter (Part #: RHBP-CLOTHBAG)
- 1 x Round Pre-Filter (Part #: RHBP-PREFILTR)
- 1 x Exhaust Filter (Part #: RHBP-EXHFILTER)
- 1 x 4' Vacuum Hose w/ 90 Degree Cuff (Part #: RHBP-HOSE)
- 1 x 90 Degree Swivel Cuff (Part #: RHBP-CUFF)
- 1 x Harness and Frame Assembly (Part #: RHBP-HARNESS)

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE

WARNING

To reduce the risk of fire, electric shock, or injury:

1. This machine is suitable for commercial use, for example in hotels, schools, hospitals, factories, shops and offices and for normal housekeeping purposes.
2. This machine is not suitable for picking up health endangering dust, unless special authorized precautions are complied with.
3. This machine is for dry use only and shall not be used or stored outdoors in wet conditions. Store indoors between min. 32 F (degrees Fahrenheit) and max 140 F(degrees Fahrenheit).
4. The machine must not be used for the suction of water or other liquids.
5. Live conductors must not be vacuum cleaned by the machine for dry dust before their current has been switch off. This is to avoid creating a short-cut through the dust remaining in the nozzles and tubes.
6. The machine must not be used for picking up combustible or explosive materials, nor should it be used in an explosive atmosphere.
7. Under no circumstances should the machine be used for picking up hot material. In particular the machine must not be used for cleaning open and closed fireplaces, ovens or similar that contain warm ashes.
8. The machine must not be used if the electrical cord or plug shows any sign of damage. Regularly inspect the cord and plug for damage, in particular if it has been crushed, shut in a door or run over.
9. The machine must not be used if it is faulty.
10. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
11. Always turn off this appliance before connecting or disconnecting motorized nozzle.
12. When repairing or replacing the cord, the same type of cord as originally supplied with the machine must be used.
- 12a. If the fixed supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
13. The plug must always be removed from the socket outlet before starting any service work of the machine or the cord.
14. Disconnect cleaner before servicing and when not in use. Do not leave an unattended vacuum plugged in.
15. No changes or modifications to the mechanical or electrical safety devices should be made.

16. This appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Children must be supervised not to play with the appliance.

SERVICING OF DOUBLE INSULATED APPLIANCES

A double insulated appliance is marked with one of the following: The words 'DOUBLE INSULATION' or 'DOUBLE INSULATED' or the double insulation symbol (square within a square).

In a double-insulated appliance, two systems of insulation are provided instead of grounding. No grounding means is provided on a double-insulated appliance, nor should a means for grounding be added to the appliance. Servicing a double-insulated appliance requires extreme care and knowledge of the system, and should be done by qualified service personnel. Replacement parts for a double-insulated appliance must be identical to the parts they replace.

INSTRUCTIONS FOR USE

Before using the machine make sure that the frequency and voltage shown on the rating plate corresponds with the mains voltage.

Specifications and details are subject to change without prior notice. The accessories shown in the pictures may vary from model to model.

The size and quality of the dust bag and filters affect machine efficiency. Use of non-original dust bags or non-original filters can cause restricted air flow which may lead to machine overload. Using non-original vacuum bags or filters will void the warranty.

This product must not be treated as domestic refuse. Instead, it should be handed in to a collection point for the recycling of electrical and electronic components.


By ensuring the product is treated in the correct manner, you will help prevent any negative impact on the environment and health that might arise were the product to be discarded as ordinary refuse.

For further information about recycling, you should contact your local authorities, refuse collection service or the sales outlet where you bought the goods.


SAVE THIS INSTRUCTION

This appliance conforms with EC Directive 89/336/EEC, EEC, 73/23/EEC, 93/68/EEC

Revision Date: 11/1/2023

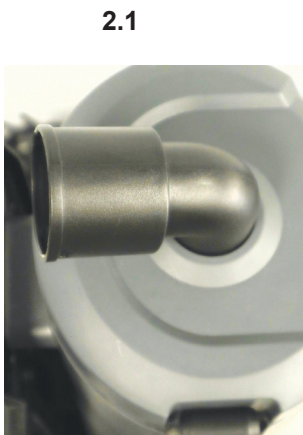

12

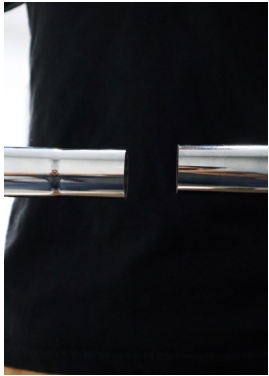

12.1



13



5



5.1



5.2



14



15



 
5.3



5.4



5.5

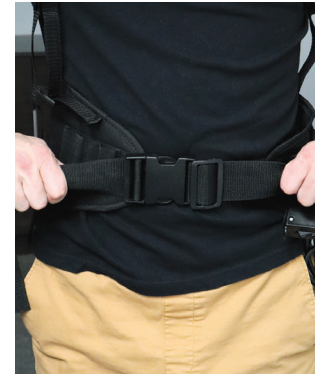

Warranty Information*

5 Years: Rotationally-Molded Components

1 Year: Parts

6 Months: Labor

*See website or authorized Rhino dealer for complete details.

Contact Information

Rhino Cleaning Machines

1950 Old Dunbar Road

West Columbia, SC 29172

+1 (888) 390-5111

customerservice@rhinofloorcare.com

5.6



5.7



6



6.1



6.2



6.3



9.1



9.2



10



7



7.1



8



10.1



10.2



10.3



8.1



8.2



9



11



11.1



11.2



3

4