




RHINO
CLEANING MACHINES

Parts Manual

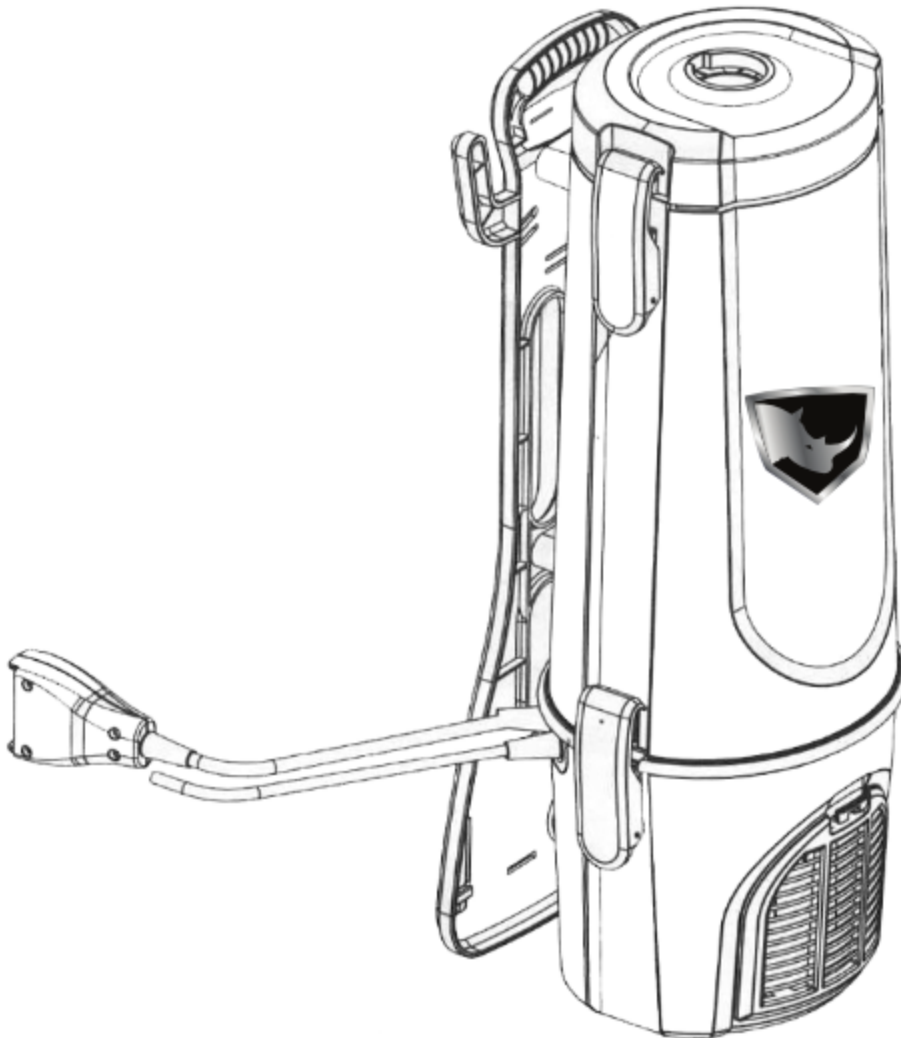

RHINO RV-BP1 BACKPACK VACUUM

Rhino RV-BP1 Parts List

Ref No	Part Number	Description	Use QTY
1	RHBP-OUTGR	Outlet grille	1
2	RHBP-BRAXB	Buckle Rotate Axes B	4
3	RHBP-BKLST	Buckle Seat	4
4	RHBP-BRAXA	Buckle Rotate Axes A	4
5	RHBP-BKLBRK	Buckle Bracket	4
6a	RHBP-BKLASY	Buckle Assembly	4
7	RHBP-BKLPH	Buckle Pothook	2
8	RHBP-KLJ2821	3.9 x 14 Screw	2
9	RHBP-KLJ2822	3.9 x 16 Screw	8
10	BKLFNS	Buckle Fastness Seat	4
11	RHBP-PRSLN	Pressing Line	2
12	RHBP-KLJ2822	3.9 x 16 Screw	4
13	RHBP-MWPRSBL	Motor Wire Pressing Block	1
14	RHBP-MTRSCRW	Motor Screw	1
15	RHBP-STRBRDAS	Non Adjustable Soft Starter Board Assembly (NTC)	1
16	RHBP-MTRCUSH	Motor Rear Cushion Block A	1
17	RHBP-VCMMTR	Vacuum Motor	1
18	RHBP-MTRCVR	Motor Cover Sealing	1
19	RHBP-MTRSILE	Motor Silencer	1
21	RHBP-MTRCVRAS	Motor Cover Assembly	1
22	RHBP-KLJ2822	3.9 x 16 Screw	4
23	RHBP-PREFILTER	Round Pre-Filter	1
24	RHBP-BAGBRK	Bag Bracket	1
25	RHBP-BARREL	Barrel	1
26	RHBP-PAPBAG	Paper Vacuum Bag, Pack of 10	1
27	RHBP-STRPMTHR	Strap Motherboard	1
28	RHBP-KLJ2822	3.9 x 16 Screw	4
29	RHBP-STRPS	Padded Shoulder Straps	1
30	RHBP-CLOTHBAG	Cloth Bag/Filter	1
31	RHBP-TOPCVR	Top Cover	1
32	RHBP-KLJ2821	3.9 x 14 screw	3
33	RHBP-PRESSPLT	Cloth Bag Pressing Plate	1
34	RHBP-SWITCH	Toggle Switch	1
35	RHBP-SWTPCVR	Switch Top Cover	1
36	RHBP-GB84585	2.9 x 14 Screw	4
37	RHBP-SWBTCVR	Switch Bottom Cover	1
38	RHBP-SWPWRCD	Switch Power Cord	1
39	RHBP-PWRDCVR	Power Cord Cover	3
40	RHBP-MTRCVR	Motor Cover	1
41	RHBP-WIRECAP	Wiring Cap	3
42	RHBP-BTBRLSIL	Bottom Barrel Silencer	1
43	RHBP-PWRCORD	Power Cord	1
44	RHBP-BTMBARR	Bottom Barrel	1
45	RHBP-KLJ2822	3.9 x 16 Screw	3
46	RHBP-EXHFILTER	Exhaust Filter	1
47	RHBP-WAND	2-Piece Aluminum Wand	1
48	RHBP-HOSE	4' Vacuum Hose w/ 90 Degree Cuff	1
49	RHBP-CREVTOOL	Crevice Tool	1

50	RHBP-BRUSH	Round Dusting Brush	1
51	RHBP-FLTOOL	Hard/Soft Floor Tool	1

