




T5

Scrubber-Dryer

English **EN**
Operator Manual

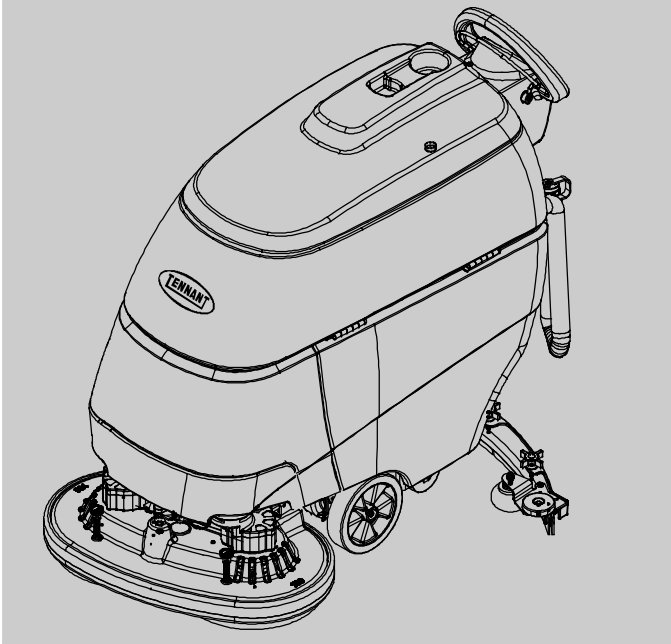

CE



For the latest Parts manual and other language Operator manuals, visit:

www.tennantco.com/manuals

www.tennantco.com

9002347
Rev. 07 (06-2016)



OPERATION

This manual is furnished with each new model. It provides necessary operation and maintenance instructions.



Read this manual completely and understand the machine before operating or servicing it.

This machine will provide excellent service. However, the best results will be obtained at minimum costs if:

- The machine is operated with reasonable care.
- The machine is maintained regularly - per the machine maintenance instructions provided.
- The machine is maintained with manufacturer supplied or equivalent parts.

Parts and supplies may be ordered online, by phone, by fax or by mail.



PROTECT THE ENVIRONMENT

Please dispose of packaging materials, used components such as batteries and fluids in an environmentally safe way according to local waste disposal regulations.



Always remember to recycle.

INTENDED USE

The T5 walk behind scrubber is designed to scrub hard surfaces (concrete, asphalt, stone, synthetic, etc) in an indoor environment. Typical applications include hotels, schools, hospitals, factories, shops, offices, and rental businesses. Do not use this machine on carpeted surfaces. Use only recommended pads and commercially available floor cleaners intended for machine application. Do not use this machine other than described in this Operator Manual.

MACHINE DATA

Please fill out at time of installation for future reference.

Model No. - _____

Serial No. - _____

Installation Date - _____



TENNANT N.V.
Industrielaan 6 5405 AB
P.O. Box 6 5400 AA Uden- The Netherlands

europa@tenantco.com
www.tenantco.com

Specifications and parts are subject to change without notice.

Original instructions, copyright ©2006-2016 Tennant Company
Printed in The Netherlands. All rights reserved.

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	4	ADJUSTING SCRUB HEAD BRUSHES	24
SAFETY LABELS	6	DISK MODEL	24
MACHINE COMPONENTS	7	CYLINDRICAL BRUSH MODEL	25
CONTROL PANEL COMPONENTS	8	MAINTENANCE CHART	27
MACHINE INSTALLATION	9	MACHINE MAINTENANCE	28
UNCRATING MACHINE	9	DAILY MAINTENANCE	
INSTALLING BATTERIES	9	(AFTER EVERY USE)	28
HOW THE MACHINE WORKS	10	MONTHLY MAINTENANCE	30
BRUSH AND PAD INFORMATION	10	BATTERY MAINTENANCE	31
MACHINE SETUP	11	MAINTENANCE-FREE BATTERIES	31
ATTACHING SQUEEGEE ASSEMBLY	11	FLOODED (WET) LEAD-ACID BATTERIES .	31
INSTALLING BRUSHES/PADS	11	CHECKING CONNECTIONS / CLEANING ..	31
EC-H2O NANOCLEAN WATER CONDITIONING		SQUEEGEE BLADES	32
CARTRIDGE (EC-H2O NANOCLEAN		REPLACING SQUEEGEE BLADES:	32
MODEL)	13	MOTOR MAINTENANCE	32
INSTALLING FAST-PAK CARTON		FAST SYSTEM MAINTENANCE	33
(FAST MODEL)	13	EC-H2O NANOCLEAN WATER CONDITIONING	
FILLING SOLUTION TANK	14	CARTRIDGE REPLACEMENT	33
MACHINE OPERATION	14	EC-H2O MODULE FLUSH PROCEDURE ..	34
PRE- OPERATION CHECKS	14	JACKING UP MACHINE	35
STARTING THE MACHINE	14	TRANSPORTING MACHINE	35
EMERGENCY SHUT- OFF BUTTON	16	STORING MACHINE	35
WHILE OPERATING MACHINE	16	FREEZE PROTECTION	36
BATTERY CHARGE LEVEL INDICATOR ...	17	TROUBLESHOOTING	37
HOUR METER	18	CONTROL PANEL FAULT INDICATOR CODES	40
OFF- AISLE WAND SETUP AND		GENERAL MACHINE	
OPERATION	18	DIMENSIONS/CAPACITIES/PERFORMANCE ..	41
PREPARING MACHINE FOR OFF- AISLE		MACHINE DIMENSIONS	42
WAND SCRUBBING:	18		
OPERATING THE OFF- AISLE WAND:	18		
DRAINING AND CLEANING TANKS	19		
DRAINING RECOVERY TANK	19		
DRAINING SOLUTION TANK	20		
CHARGING BATTERIES	20		
BATTERY CHARGER SPECIFICATIONS: ..	20		
ON- BOARD BATTERY CHARGER			
SETTINGS:	21		
USING THE ON- BOARD BATTERY			
CHARGER	22		
ON- BOARD BATTERY CHARGER ERROR			
CODES	23		
USING AN OFF- BOARD BATTERY CHARGER			
(OPTION)	24		

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS

The following warning precautions are used throughout this manual as indicated in their description:

⚠ WARNING: To warn of hazards or unsafe practices which could result in severe personal injury or death.

FOR SAFETY: To identify actions which must be followed for safe operation of equipment.

The following information signals potentially dangerous conditions to the operator. Know when these conditions can exist. Locate all safety devices on the machine. Report machine damage or faulty operation immediately.

⚠ WARNING: Batteries emit hydrogen gas. Explosion or fire can result. Keep sparks and open flame away. Keep battery compartment open when charging.

⚠ WARNING: Flammable materials can cause an explosion or fire. Do not use flammable materials in tank(s).

⚠ WARNING: Flammable materials or reactive metals can cause an explosion or fire. Do not pickup.

⚠ WARNING: Spinning brush. Keep hands away.

This machine may be equipped with technology that automatically communicates over the cellular network. If the machine will be operated where cell phone use is restricted because of concerns related to equipment interference, please contact a Tennant representative for information on how to disable the cellular communication functionality.

FOR SAFETY:

1. Do not operate machine:

- Unless trained and authorized.
- Unless operator manual is read and understood.
- Under the influence of alcohol or drugs.
- While using cell phone or other electronic devices.
- Unless mentally and physically capable of following machine instructions.
- If not in proper operating condition.
- In areas where flammable vapors/liquids or combustible dusts are present.
- In areas that are too dark to safely see the controls or operate the machine.
- In areas with possible falling objects.
- With pads or accessories not supplied or approved by Tennant. The use of other pads may impair safety.
- In outdoors areas. This machine is for indoor use only.

2. Before starting machine:

- Check machine for fluid leaks.
- Make sure all safety devices are in place and operate properly.

3. When using machine:

- Use only as described in this manual.
- Go slowly on inclines and slippery surfaces.
- Wear closed-toe non-slip shoes.
- Reduce speed when turning.
- Use care when reversing machine.
- Do not carry passengers on machine.
- Keep children and unauthorized persons away from machine.
- Do not allow machine to be used as a toy.
- Always follow safety and traffic rules.
- Report machine damage or faulty operation immediately.
- Follow mixing and handling instructions on chemical containers.
- Follow site safety guidelines concerning wet floors.
- Do not scrub on inclines that exceed 5% grade or transport on inclines that exceed 8%.

4. Before leaving or servicing machine:

- Stop on level surface.
- Set parking brake, if equipped.
- Turn off machine and remove key.

5. When servicing machine:

- All work must be done with sufficient lighting and visibility.
- Keep work area well ventilated.
- Avoid moving parts. Do not wear loose clothing, jewelry and secure long hair.
- Block machine tires before jacking machine up.
- Jack machine up at designed locations only. Support machine with jack stands.
- Use hoist or jack that will support the weight of the machine.
- Do not power spray or hose off machine.
- Disconnect battery connections and battery charger before working on machine.
- Keep all metal objects off batteries.
- The use of incompatible battery chargers may damage battery packs and potentially cause a fire hazard.
- Inspect charger cord regularly for damage.
- Do not disconnect the charger DC cord from the machine receptacle when charger is operating. Arcing may result. If the charger must be interrupted during charging, disconnect the AC power supply cord first.
- Avoid contact with battery acid.
- Use a hoist or adequate assistance when lifting batteries.
- All repairs must be performed by trained personnel.
- Do not modify the machine from its original design.
- Use Tennant supplied or approved replacement parts.
- Wear personal protective equipment as needed and where recommended in this manual.

6. When loading/unloading machine onto/off truck or trailer:

- Drain tanks before loading machine.
- Lower scrub head and squeegee before tying down machine.
- Turn off machine and remove key.
- Use a ramp, truck or trailer that will support the weight of the machine and operator.
- Use a winch if ramp incline exceeds a 19.5% grade level.
- Set parking brake, if equipped.
- Block machine wheels.
- Use tie-down straps to secure machine.



For Safety: wear protective gloves.




For Safety: wear eye protection.


OPERATION

SAFETY LABELS

The safety labels appear on the machine in the locations indicated. Replace labels if they are missing or become damaged or illegible.

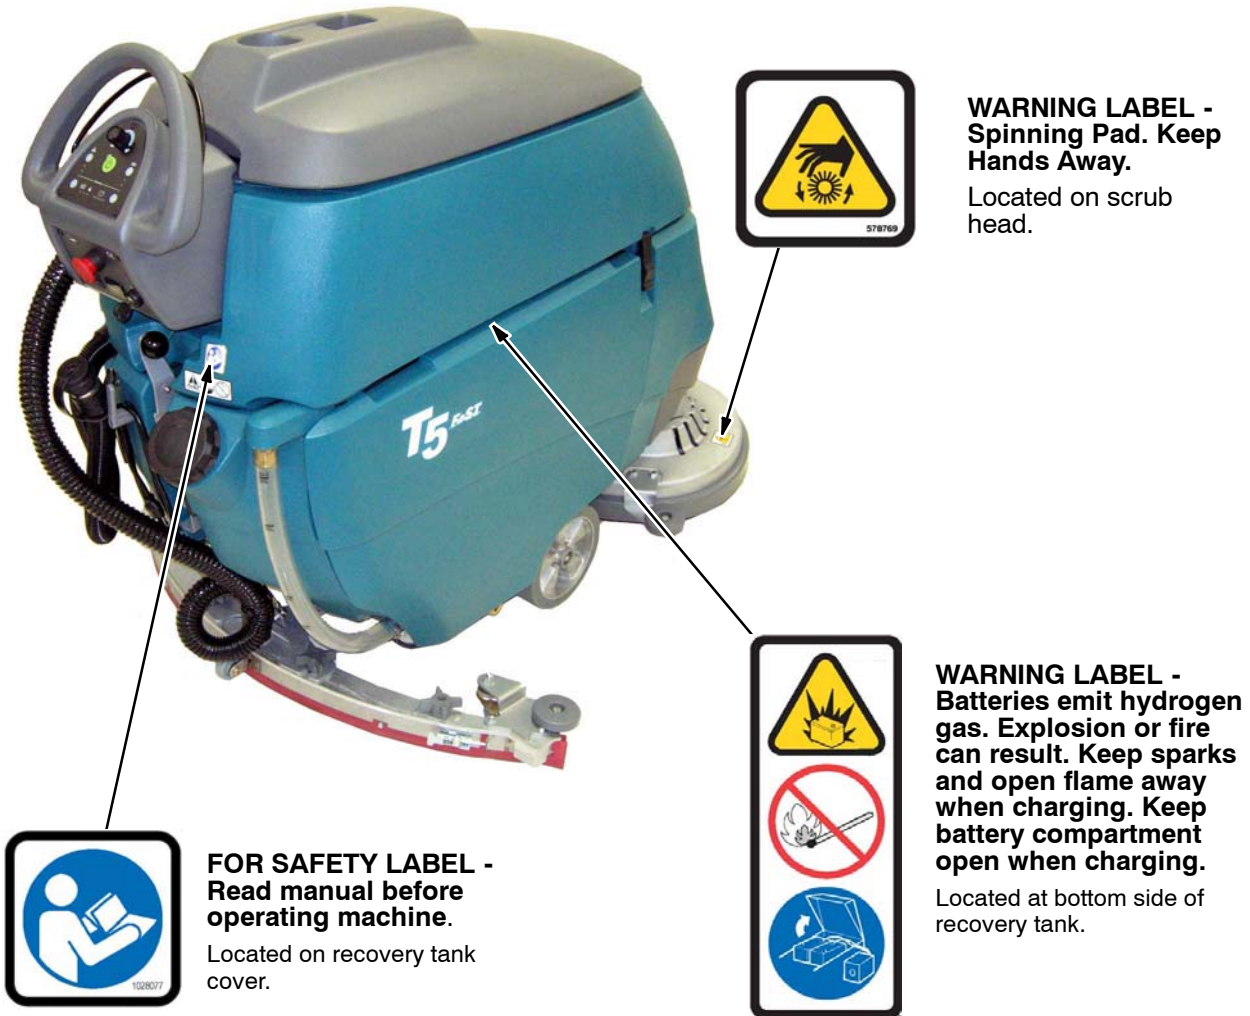


MACHINE COMPONENTS

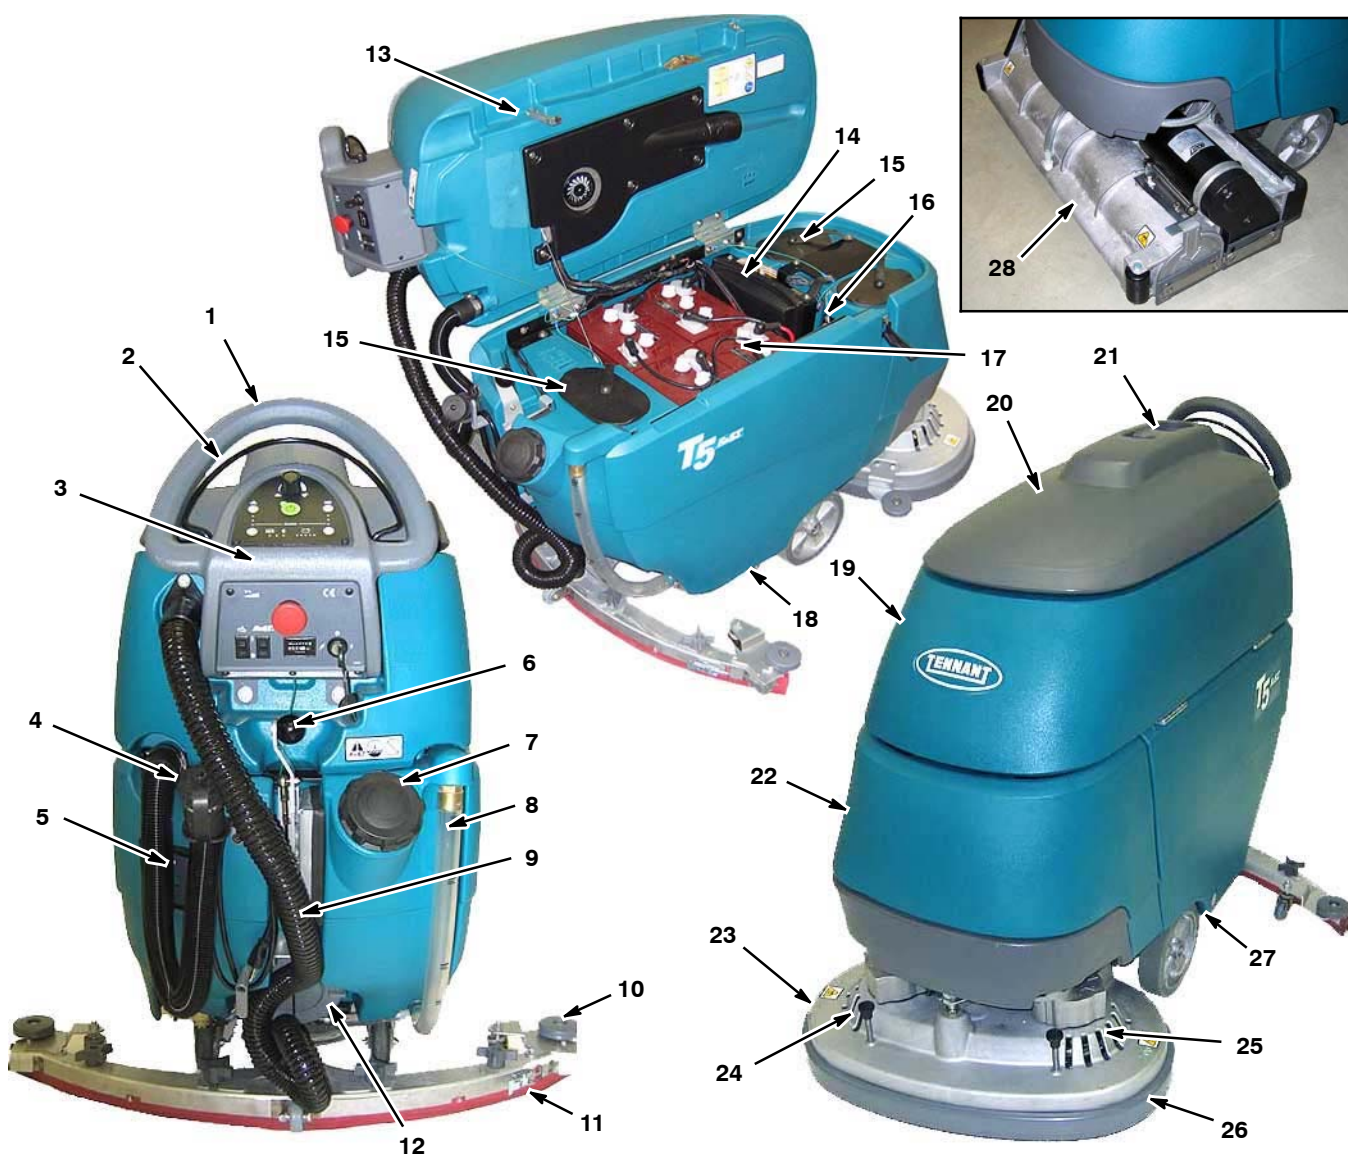

- | | |
|---|--|
| <ol style="list-style-type: none"> 1. Control Handle 2. Control Handle Start Bail 3. Upper & Lower Control Panels 4. Recovery Tank Drain Hose 5. On- board Battery Charger 6. Squeegee Lift Lever 7. Rear Fill-Port 8. Solution Tank Level/Drain Hose 9. Squeegee Vacuum hose 10. Wall Rollers 11. Squeegee Assembly 12. Solution Tank Clean-Out Port | <ol style="list-style-type: none"> 13. Recovery Tank Support Stand 14. Control Board 15. Bucket Fill Port/Clean- out Port 16. FaST- PAK Carton Compartment (FaST Model)
<i>ec- H2O</i> System Module (<i>ec- H2O</i> Model) 17. Batteries 18. Off- Aisle Wand Solution Hose Coupler 19. Recovery Tank 20. Recovery Tank Cover 21. Cup Holder 22. Solution Tank 23. Disk Scrub Head 24. Pad Release Plunger 25. Pad Driver Window 26. Scrub Head Skirt 27. Parking Brake 28. Cylindrical Brush Scrub Head |
|---|--|

CONTROL PANEL COMPONENTS

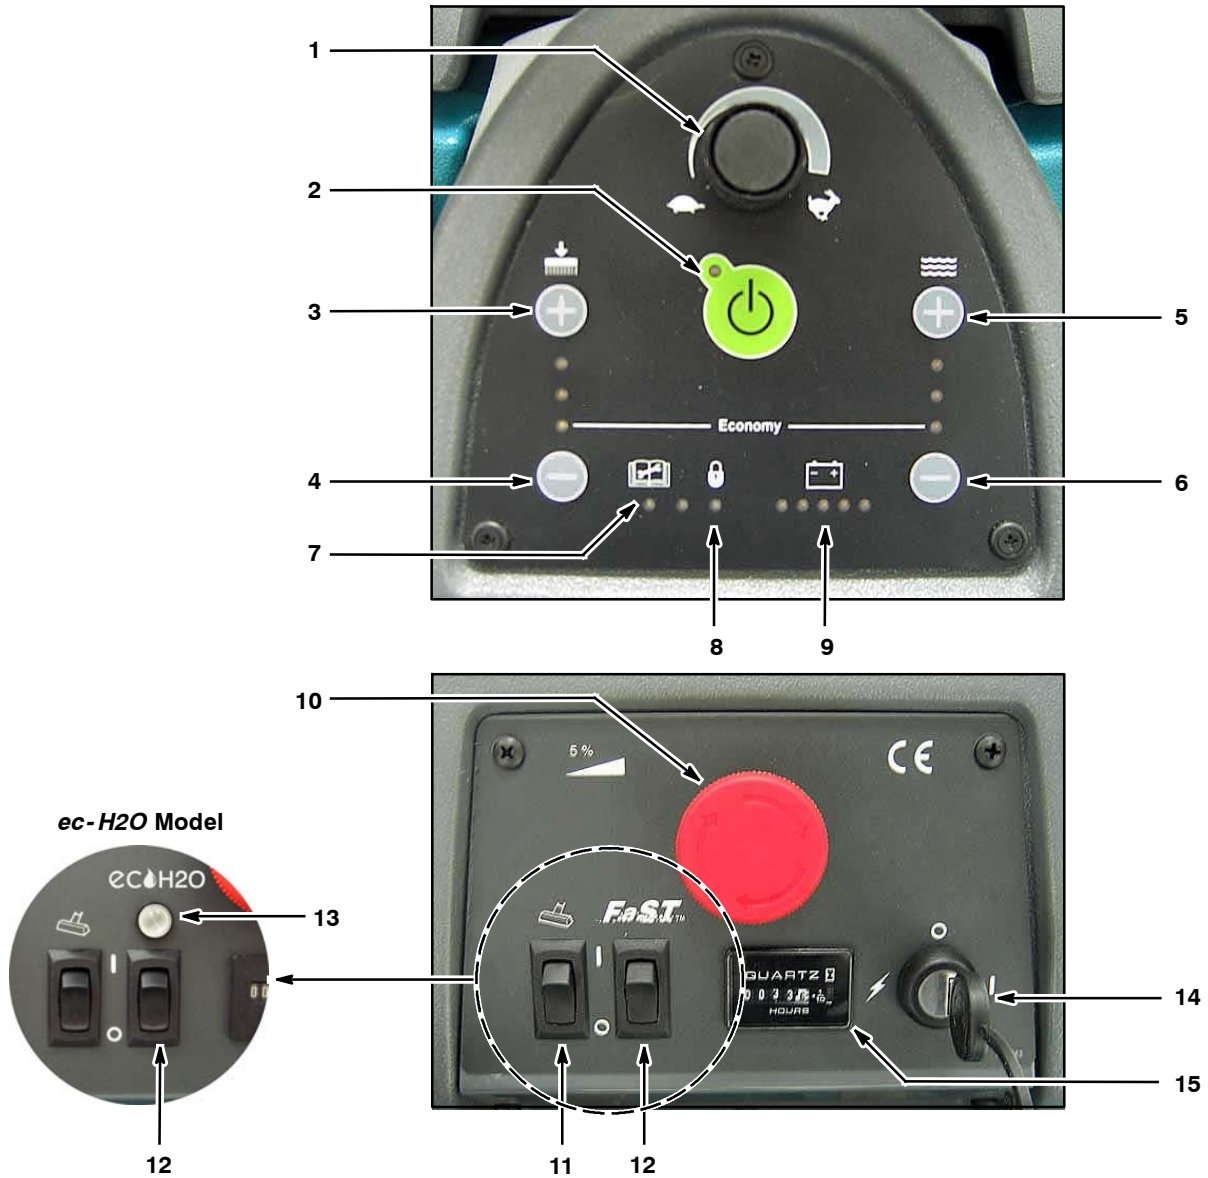

- | | |
|---|--|
| 1. Speed control knob | 9. Battery charge level indicator |
| 2. 1-STEP scrub button | 10. Emergency shut-off button |
| 3. Brush pressure increase button (+) | 11. Off- Aisle wand on/off switch (option) |
| 4. Brush pressure decrease button (-) | 12. FaST system on/off switch (FaST model)
ec-H2O system on/off switch (ec-H2O model) |
| 5. Solution flow increase button (+) | 13. ec-H2O system indicator light (ec-H2O model) |
| 6. Solution flow decrease button (-) | 14. Main power on/off key switch |
| 7. Fault indicator - Contact Service | 15. Hour meter |
| 8. Supervisor Control indicator - Lockout feature | |

MACHINE INSTALLATION

UNCRATING MACHINE

- Carefully check the shipping crate for signs of damage. Report damage at once to carrier.
- Check the contents list. Contact distributor for missing items.
Contents:
 - 4- 6 V Batteries- Optional
 - 3- Battery Cable Jumpers
 - Battery Tray
 - Squeegee Assembly
 - 2- Pad drivers (Disk Model)
 - 2- Brushes (Cylindrical Brush Model)
- To uncrate your machine, remove the shipping hardware and straps that secure the machine to the pallet. Carefully back machine down ramp.

ATTENTION: Do not roll machine off pallet unless a ramp is used, machine damage may occur.

ATTENTION: To prevent possible machine damage, install batteries after removing machine from shipping pallet.

INSTALLING BATTERIES

⚠ WARNING: Batteries emit hydrogen gas. Explosion or fire can result. Keep sparks and open flame away. Keep battery compartment open when charging.

FOR SAFETY: When servicing machine, wear personal protection equipment as needed. Avoid contact with battery acid.

Battery Specifications:

Four 6 volt, 180A/5h or 200A/5h deep cycle batteries.
Maximum battery dimensions:
190 mm W x 275 mm L x 284 mm H.

- Park the machine on a level surface, remove the key and set the parking brake.

FOR SAFETY: Before leaving or servicing machine, stop on level surface, set parking brake if equipped, turn off machine and remove key.

- Lift the recovery tank and remove the right side battery compartment panel (Figure 1). 13mm wrench required.

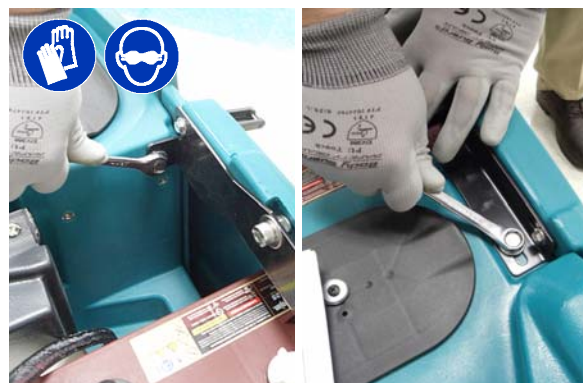


FIG. 1

- Carefully install the batteries into the battery compartment tray (Figure 2). Arrange the battery posts as shown (Figure 3).



FIG. 2

- Connect the battery cables to the battery posts as shown (Figure 3), RED TO POSITIVE (+) and BLACK TO NEGATIVE (-).

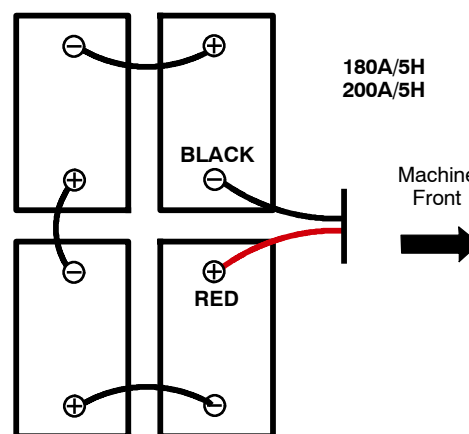


FIG. 3

IMPORTANT: If your machine is equipped with the on-board battery charger, make sure that the charger is properly set for your battery type before charging (See ON-BOARD CHARGER SETTINGS).

HOW THE MACHINE WORKS

Conventional Scrubbing:

Water and detergent from the solution tank flow to the floor through a solution valve. The brushes use the detergent and water to scrub the floor clean. As the machine moves forward, the squeegee wipes the dirty solution from the floor into the recovery tank.

ec-H₂O NanoClean Scrubbing (ec-H₂O Model):

When using the ec-H₂O NanoClean technology, normal water passes through a module where it is electrically converted into a cleaning solution. The electrically converted water attacks the dirt, allowing the machine to easily scrub away the suspended soil. The converted water then returns to normal water in the recovery tank.

Foam Scrubbing (FaST Model):

(FaST- Foam activated Scrubbing Technology)

Unlike conventional scrubbing, the FaST system injects the FaST- PAK concentrate formula with a small amount of water and air onto the floor. The mixture creates a large volume of expanded wet foam for the brush to scrub the floor clean. As the machine moves forward, the foam collapses and the squeegee recovers the dirty solution into the recovery tank leaving the floor clean dry and slip free.

BRUSH AND PAD INFORMATION

For best cleaning results use the appropriate brush type for your cleaning application. Refer to the Parts manual for part number information.

Polypropylene Bristle Scrub Brush (Black) -

This general purpose polypropylene bristle scrub brush is used for scrubbing lightly compacted soilage. This brush works well for maintaining concrete, wood and grouted tile floors.

Soft Nylon Bristle Scrub Brush (White) -

Recommended for cleaning coated floors without removing finish. Cleans without scuffing.

Super Abrasive Bristle Scrub Brush (Gray) -

Nylon fiber impregnated with abrasive grit to remove stains and soilage. Strong action on any surface. Performs well on buildup, grease, or tire marks.

Polishing Pad (White) -

Used to maintain highly polished or burnished floors.

Buffing Pad (Red) - Used for light duty scrubbing without removing floor finish.

Scrubbing Pad (Blue) - Used for medium to heavy-duty scrubbing. Removes dirt, spills, and scuffs and leaves surface clean ready for recoating.

Stripping Pad (Brown) - Used for stripping of floor finish to prepare the floor for recoating.

Heavy Duty Stripping Pad (Black) - Used for aggressive stripping of heavy finishes/sealers, or very heavy duty scrubbing.

MACHINE SETUP

ATTACHING SQUEEGEE ASSEMBLY

FOR SAFETY: Before leaving or servicing machine, stop on level surface, set parking brake if equipped, turn off machine and remove key.

1. Park the machine on a level surface, remove the key and set the parking brake if equipped.
2. Lift the squeegee lift lever to the upward position (Figure 4).

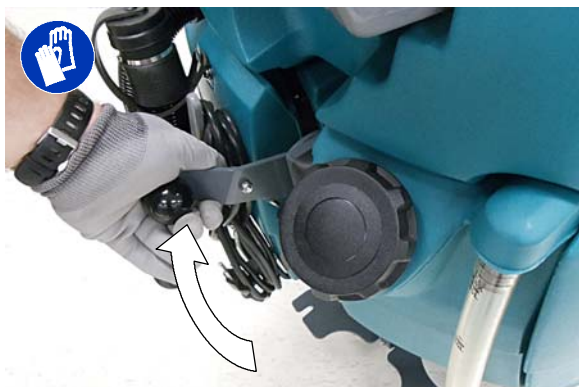


FIG. 4

3. Mount the squeegee assembly to the squeegee pivot bracket and secure with knobs (Figure 5).



FIG. 5

4. Connect the vacuum hose to the squeegee assembly. Loop the hose as shown using the hose clip provided (Figure 6).



FIG. 6

5. Check the squeegee blades for proper deflection. The blades should deflect as shown (Figure 7).



FIG. 7

6. To adjust the blade deflection, place the squeegee assembly on a level surface and adjust the casters as shown (Figure 8).

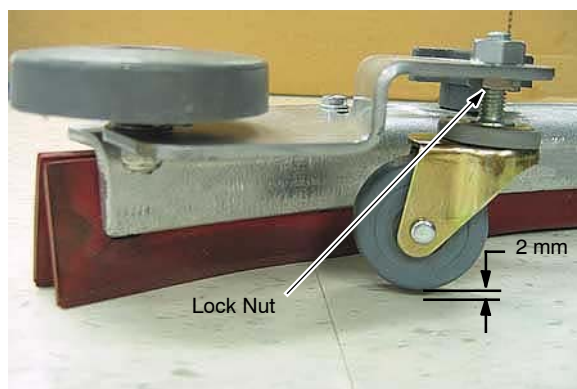


FIG. 8

INSTALLING BRUSHES/PADS

FOR SAFETY: Before leaving or servicing machine, stop on level surface, set parking brake if equipped, turn off machine and remove key.

Disk Model:

1. Raise scrub head off the floor and remove key.
2. Attach the pad to the pad driver before installing the driver. Secure pad with centerlock (Figure 9).

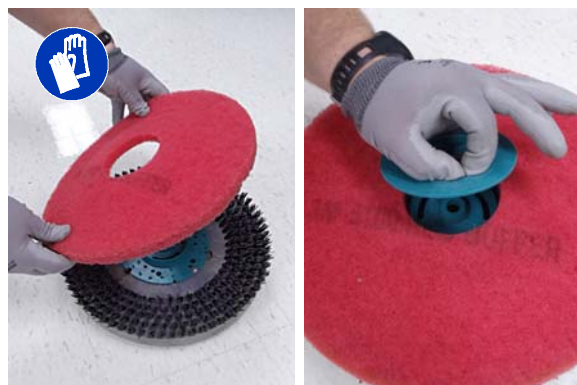


FIG. 9

OPERATION

3. Set the yellow spring clips to the open position to make brush installation easier. Press clips down and outward to set (Figure 10).

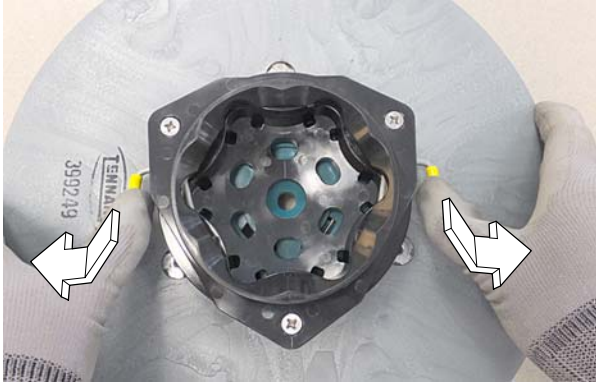


FIG. 10

4. Align the pad driver or brush under the motor hub and push it upward to engage hub (Figure 11).



FIG. 11

5. To remove the pad driver or brush, raise the scrub head and push the pad release plunger downward (Figure 12).



FIG. 12

6. Check the scrub head to ensure that it is properly adjusted (See ADJUSTING SCRUB HEAD BRUSHES).

Cylindrical Brush Model:

1. Raise scrub head off the floor and remove key.
2. Remove idler plate from scrub head by pressing the spring tab downward (Figure 13).



FIG. 13

3. Attach idler plate to the brush end that has the double row of bristles (Figure 14). Install brush.



FIG. 14

4. Check the brushes to ensure they are properly adjusted (See ADJUSTING SCRUB HEAD BRUSHES).

ec-H2O NanoClean WATER CONDITIONING CARTRIDGE (ec-H2O NanoClean model)

(ec-H2O models labeled ec-H2O NanoClean)

The ec-H2O system is equipped with a water conditioning cartridge. The cartridge is designed to protect the machine's plumbing system from potential scaling. The cartridge is located behind the right side brush motor (Figure 15).

The cartridge is required to be replaced when it reaches its maximum water usage or expiration time of when the cartridge was activated, whichever ever comes first.

Depending on machine usage a new cartridge can last up to 24 months.



FIG. 15

All cartridges are labeled with a manufacture date. The shelf-life of an un-installed cartridge is one year from manufacture date. For new cartridge replacement, the ecH2O module timer must be reset. See ec-H2O NanoClean WATER CONDITIONING CARTRIDGE REPLACEMENT.

ATTENTION: During first time use and after replacing the water conditioning cartridge, the ec-H2O system will automatically override the selected solution flow rate for up to 75 minutes.

The ec-H2O system indicator light will blink green/red when it's time to replace cartridge (Figure 16).



FIG. 16

INSTALLING FaST- PAK CARTON (FaST Model)

ATTENTION: The FaST- PAK Concentrate Formula is specifically designed for the FaST system. NEVER use a substitute. Machine damage may result.

1. Pull out the hose connector from the FaST- PAK carton and remove cap (Figure 17).

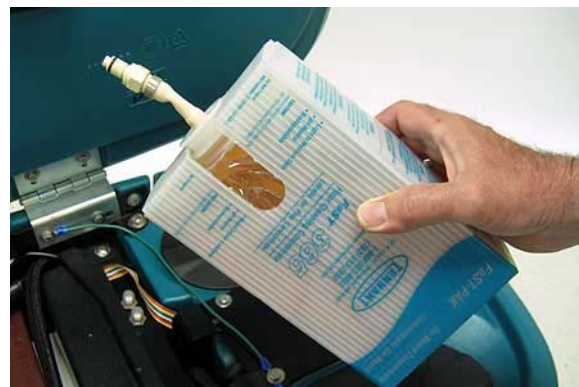


FIG. 17

2. Open the battery compartment. Connect the FaST- PAK carton to the supply hose and place carton in compartment (Figure 18). **Make sure the hose does not get pinched.**

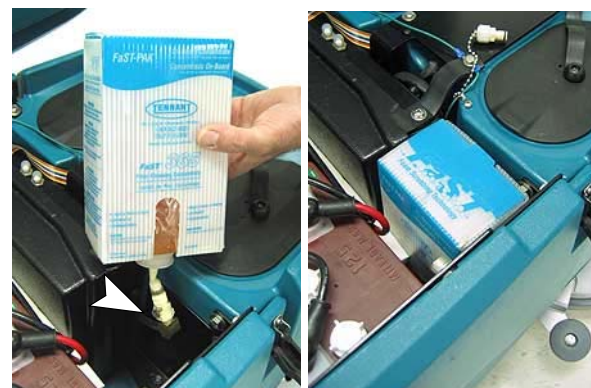


FIG. 18

3. When the supply hose is not in use, connect the storage plug to prevent the FaST system from drying out and clogging up the hose. (Figure 19).



FIG. 19

OPERATION

FILLING SOLUTION TANK

FOR SAFETY: Before leaving or servicing machine, stop on level surface, set parking brake if equipped, turn off machine and remove key.

Using a hose or bucket, fill the solution tank to the "MAX 85L" mark with water (Figure 20).

For Conventional Scrubbing: The water temperature must not exceed 60°C. Pour a recommended cleaning detergent into the solution tank according to mixing instructions on the container.

For FaST or ec-H2O Scrubbing: Use cool clean water only (less than 21°C). Do not add any conventional floor cleaning detergents, system failure may result.



FIG. 20

ATTENTION: For conventional scrubbing, only use commercially approved cleaning detergents. Machine damage due to improper detergent usage will void the manufacturer's warranty.

⚠ WARNING: Flammable materials can cause an explosion or fire. Do not use flammable materials in tank(s).

MACHINE OPERATION

FOR SAFETY: Do not operate machine unless operator manual is read and understood.

PRE- OPERATION CHECKS

- Sweep area.
- Check the battery charge level indicator.
- Check the brushes/pads for wear.
- Check the squeegee blades for wear and proper adjustment.
- Check the machine for fluid leaks.
- Make sure the recovery tank is empty and the float shut-off screen is installed and clean.
- Check the scrub head skirt for wear.
- For FaST Scrubbing:** Check the FaST-PAK concentrate level.
- For FaST or ec-H2O Scrubbing:** Make sure the solution tank is filled with cool clean water only.
- For FaST or ec-H2O Scrubbing:** Ensure that all conventional cleaning agents are drained and rinsed from solution tank.

STARTING THE MACHINE

1. Release the parking brake if equipped (Figure 21).
2. Turn the key to the on (I) position (Figure 21).



FIG. 21

3. **FaST Model:** Press the FaST system switch to the on (I) position (Figure 22).

ec-H2O Model: Press the ec-H2O system switch to the on (I) position (Figure 22). The ec-H2O system indicator light will not turn on until the machine starts scrubbing.

ATTENTION: ec-H2O NanoClean Models- During first time use and after replacing the water conditioning cartridge, the ec-H2O system will automatically override the selected solution flow rate for up to 75 minutes.



FIG. 22

IMPORTANT: NEVER turn the FaST/ec-H2O system switch on when conventional scrubbing. Conventional cleaning detergents/restorers may cause failure to the FaST/ec-H2O solution system. Drain, rinse and refill solution tank with cool clean water before operating the FaST/ec-H2O system.

4. Lower the squeegee assembly to floor by lowering the squeegee lift lever (Figure 23).



FIG. 23

5. Press the 1-STEP scrub button (Figure 24).



FIG. 24

6. Pull the control handle bail to start scrubbing (Figure 25). To reverse the machine, simply push the control handle bail forward. Raise squeegee when reversing machine.

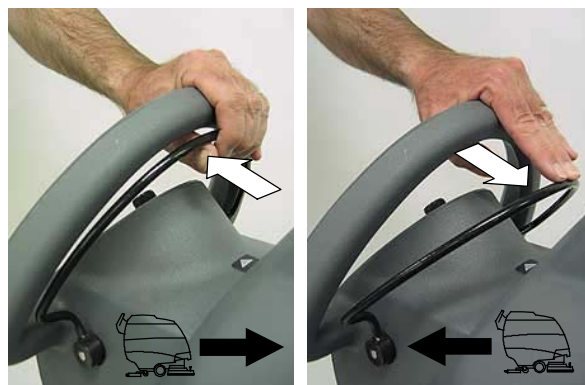


FIG. 25

7. Adjust the speed control knob to a desired scrubbing speed (Figure 26).

NOTE: 45- 60 meters per minute is the recommended scrubbing speed.



FIG. 26

8. Press the brush pressure and solution flow buttons to increase (+) or decrease (-) as needed (Figure 27). To shut off the solution flow, continue to press the decrease button (-) until the lights turn off.



FIG. 27

NOTE: The solution flow cannot be adjusted when the machine is set for FaST scrubbing or for ec-H2O scrubbing on ec-H2O models manufactured before ec-H2O NanoClean models.

OPERATION

ec-H2O NanoClean Models (ec-H2O models labeled ec-H2O NanoClean)

To adjust the solution flow rate when ec-H2O scrubbing, press the solution flow button located on the ec-H2O module (Figure 28). One LED= low, two LED's=medium, and three LED's= high (Figure 28). The ec-H2O module is located under the recovery tank. Drain recovery tank before lifting tank.

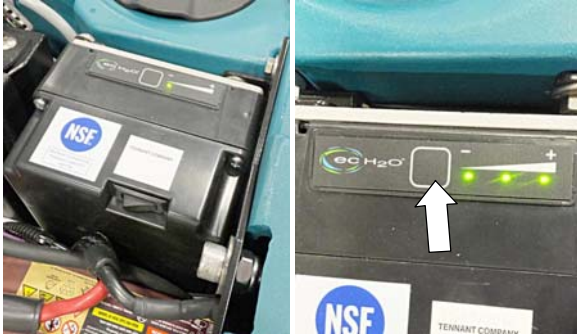


FIG. 28

9. To stop scrubbing, release the control handle bail, press the 1-STEP scrub button and raise the squeegee.

EMERGENCY SHUT-OFF BUTTON

Strike the emergency emergency shut-off button, if equipped, in the event of an emergency (Figure 29). This button shuts off all power to machine. Turn the button clockwise and restart the key to regain power.



FIG. 29

WHILE OPERATING MACHINE

⚠ WARNING: Flammable materials or reactive metals can cause an explosion or fire. Do not pickup.

1. Overlap each scrub path by 5 cm.
2. Keep the machine moving to prevent damage to floor finish.
3. Do not operate machine in areas where the ambient temperature is above 43° C (110° F). Do not operate scrubbing functions in areas where the ambient temperature is below freezing 0° C (32° F)

4. Conventional scrubbing: Pour a commercially approved foam control solution into the recovery tank if excessive foam appears.

ATTENTION: Do not allow foam to enter the float shut-off screen, vacuum motor damage will result. Foam will not activate the float shut-off screen.

5. For heavily soiled areas, use the double scrubbing method. First scrub the area with the squeegee up, let solution set for 3-5 minutes, then scrub the area a second time with squeegee down.
6. When leaving the machine unattended, remove the key and set the parking brake, if equipped.
7. If the machine detects a fault, the control panel lights will blink a fault code (See CONTROL PANEL FAULT INDICATOR CODES).
8. **ec-H2O NanoClean Models (ec-H2O models labeled ec-H2O NanoClean models)**

If the ec-H2O system indicator light begins to blink green/red, the water conditioning cartridge needs to be replaced (Figure 30). See ec-H2O NanoClean WATER CONDITIONING CARTRIDGE REPLACEMENT.



FIG. 30

ec-H2O SYSTEM INDICATOR LIGHT CODE	CONDITION
Solid green	Normal operation
Blinking green/red	Water conditioning cartridge expired. Replace cartridge.
Solid or blinking* red	Contact Service Center

**Verify if cleaning detergent was added to solution tank. If ec-H2O system was operated with cleaning detergent, drain solution tank, add clear water and operate the ec-H2O system until the indicator light code clears.*

ec-H2O Models

(ec-H2O models manufactured before ec-H2O NanoClean)

If an alarm sounds and the *ec-H2O* system indicator light begins to blink red, the *ec-H2O* module must be flushed to resume *ec-H2O* operation (See *ec-H2O* MODULE FLUSH PROCEDURE) (Figure 31).

NOTE: When the alarm sounds and the light blinks red, the machine will bypass the *ec-H2O* system. To continue scrubbing, turn the *ec-H2O* switch off and change over to conventional scrubbing.

ATTENTION: (ec-H2O model) Do not allow solution tank to run dry. ec-H2O module failure may result if operated without water for an extended period.



FIG. 31

ec-H2O SYSTEM INDICATOR LIGHT CODE	CONDITION
Solid green	Normal operation
Blinking red	Flush <i>ec-H2O</i> module
Solid red	Contact Service Center

BATTERY CHARGE LEVEL INDICATOR

The battery charge level indicator displays the charge level of the batteries (Figure 32). When the batteries are fully charged, all five indicator lights will glow. As the batteries discharge, the indicator lights will begin to go out from right to left.

When the discharge level reaches the red light, the operator will have approximately one minute to continue scrubbing. When the red light begins to flash the scrubbing functions will automatically shut off to alert the operator to recharge the batteries. By pressing the 1-STEP Scrub button, when the red light is flashing, the operator will get an additional minute of scrubbing.

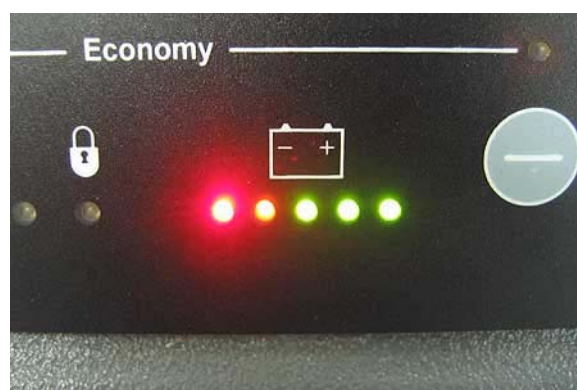


FIG. 32

OPERATION

HOUR METER

The hour meter records the number of total hours the vacuum and brush motors have been powered on. Use the hour meter to determine when to perform recommended maintenance procedures and to record service history (Figure 33). See MOTOR MAINTENANCE.



FIG. 33

OFF-AISLE WAND SETUP AND OPERATION

If your machine is equipped with the off-aisle wand option, this allows you to scrub areas where the machine is unable to reach.

Preparing Machine for Off-Aisle Wand Scrubbing:

1. Park the machine on a level surface, turn key off and set parking brake if equipped.

FOR SAFETY: Before leaving or servicing machine, stop on level surface, set parking brake if equipped and turn off machine.

2. Connect the solution hose to the coupler at the lower right side of machine (Figure 34).



FIG. 34

3. Using the hose adapter, connect the squeegee hose to the wand hose (Figure 35).

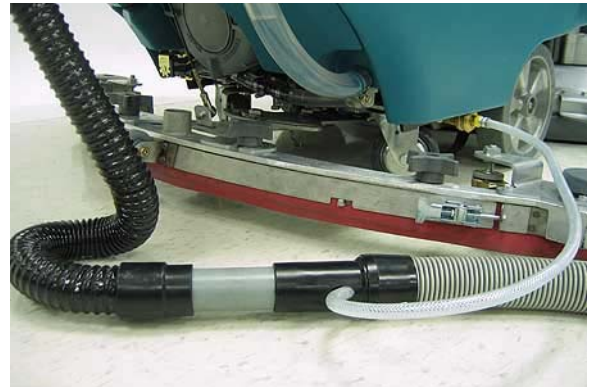


FIG. 35

4. Attach the off-aisle wand to the hoses (Figure 36).



FIG. 36

Operating the Off-Aisle Wand:

1. Turn the key and wand switch to the on (I) position (Figure 37). The FaST/ec-H2O system switch is disabled when operating the wand.



FIG. 37

- Lower the squeegee to activate the vacuum motor (Figure 38).



FIG. 38

- Squeeze trigger to activate solution. Use brush for scrubbing and squeegee for pickup (Figure 39).

⚠ WARNING: Flammable materials or reactive metals can cause an explosion or fire. Do not pickup.



FIG. 39

- After scrubbing, turn off the wand switch and squeeze the trigger for five seconds to relieve the water pressure before disconnecting the solution hose.

DRAINING AND CLEANING TANKS

After each use, the tanks should be drained and cleaned.

FOR SAFETY: Before leaving or servicing machine, stop on level surface, set parking brake if equipped, turn off machine and remove key.

DRAINING RECOVERY TANK

- Transport machine to disposal area and turn key switch off.
- While holding the drain hose upward, remove the cap and lower hose to drain (Figure 40).



FIG. 40

- After draining, open the recovery tank and clean out the tank (Figure 41).



FIG. 41

- Clean the float shut-off screen and debris tray located in the recovery tank (Figure 42).



FIG. 42

DRAINING SOLUTION TANK

1. To drain remaining water from the solution tank, pull the solution tank level hose off the hose fitting (Figure 43).



FIG. 43

2. To rinse out the solution tank remove the clean-out cap at the rear of the machine and spray water directly into the clean-out ports (Figure 44).

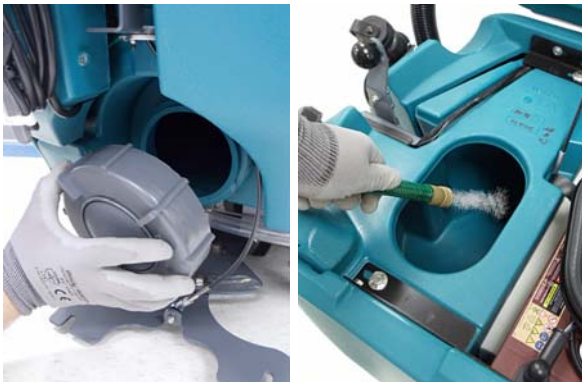


FIG. 44

3. Clean the solution tank filter (Figure 45).



FIG. 45

CHARGING BATTERIES

FOR SAFETY: When servicing machine, wear personal protection equipment as needed. Avoid contact with battery acid.

The lifetime of the batteries depends on their proper maintenance. To get the most life from the batteries:

- Do not charge the batteries more than once a day and only after running the machine for a minimum of 15 minutes.
- Do not leave the batteries partially discharged for long period of time.
- Only charge the batteries in a well-ventilated area to prevent gas build up. Charge batteries in areas with ambient temperatures 80°F / 27°C or less.
- Allow the charger to complete charging the batteries before re-using the machine.
- Maintain the proper electrolyte levels of flooded (wet) batteries by checking levels weekly (See BATTERY MAINTENANCE).

⚠ WARNING: Batteries Emit Hydrogen Gas. Keep Sparks And Open Flame Away. Keep Battery Compartment Open When Charging.

BATTERY CHARGER SPECIFICATIONS:

- CHARGER TYPE:
 - FOR SEALED (Gel) BATTERIES
 - FOR WET (Lead acid) BATTERIES
- OUTPUT VOLTAGE - 24 VOLTS
- OUTPUT CURRENT - 20 AMPS
- AUTOMATIC SHUTOFF CIRCUIT
- FOR DEEP CYCLE BATTERY CHARGING

ON-BOARD BATTERY CHARGER SETTINGS:

If your machine is equipped with the on-board charger, the charger settings must be set for your battery type. Failure to properly set will result in battery damage. The factory setting is set for the *Exide* Gel battery.

To determine your battery type, see battery label. Contact your battery supplier if not specified.

To verify the setting of the charger, connect the charger cord into an electrical receptacle. The charger will display a sequence of codes at start up as follows: SPE, U3.5, 24V, 20A, 02c, GEL. The fifth and sixth codes are the battery type "02c" and "GEL".

NOTE: The second code "U3.5" is charger version 3.5.

If the display codes do not match your battery type as shown in the tables, change the settings accordingly.

Charger Version 3.5		
Display Code		Battery Type
02c	GEL	Exide Gel
01c	Acd	Lead Acid (Wet)
03c	GEL	Gel (Generic)

Charger Version 3.4 or Earlier		
Display Code		Battery Type
00c	GEL	Gel (Sealed)
01c	Acd	Lead Acid (Wet)

To change the setting, unplug the charger, peel up the corner of the display label to access the switches (Figure 46).



FIG. 46

Set the charger switches to your battery type (Fig. 47). The charger cord must be unplugged when resetting.

035
Charger Version 3.5

ON EDGE

1 2 3 4 5 6 7 8

Exide GEL BATTERY

ON EDGE

1 2 3 4 5 6 7 8

LEAD ACID BATTERY

ON EDGE

1 2 3 4 5 6 7 8

Generic GEL BATTERY

034
Charger Version 3.4 or earlier

ON EDGE

1 2 3 4 5 6 7 8

GEL BATTERY

ON EDGE

1 2 3 4 5 6 7 8

LEAD ACID BATTERY

FIG. 47

OPERATION

USING THE ON- BOARD BATTERY CHARGER

IMPORTANT: Before charging, make sure that the charger setting is properly set for your battery type (See ON- BOARD CHARGER SETTINGS).

1. Transport the machine to a well-ventilated area.
2. Park the machine on a flat, dry surface. Turn the key off and set the parking brake, if equipped.

FOR SAFETY: Before leaving or servicing machine, stop on level surface, set parking brake if equipped, turn off machine and remove key.

3. If charging wet (lead acid) batteries check the fluid level before charging (See BATTERY MAINTENANCE).
4. Prop up the recovery tank for ventilation (Figure 48).



FIG. 48

5. Connect the charger's AC power supply cord into a properly grounded receptacle (Figure 49).

NOTE: The machine will not operate when charging.



FIG. 49

6. By pressing the arrow button on the charger you can view the following information (Figure 50).

Three-digits + the following code:

- A = Charging current
- U = Battery Voltage
- h = Charging time
- C = Charging ampere- hours [Ah]
- E = Energy used [Kwh]



FIG. 50

7. Once the charging cycle begins, the indicator lights will progress from red, yellow to green. When the green indicator light comes on, the charging cycle is done. Unplug the charger cord.

If the charger detects a problem, the charger will display an error code (See ON- BOARD BATTERY CHARGER ERROR CODES).

ON- BOARD BATTERY CHARGER ERROR CODES

DISPLAY CODE	FAULT	SOLUTION
bat	Loose or damaged battery cable	Check battery cable connections.
	Battery exceeded maximum voltage level.	No action necessary.
E01	Exceeded maximum battery voltage allowed.	No action necessary.
E02	Safety thermostat exceeded maximum internal temperature.	Check if the charger vents are obstructed.
E03	Exceeded maximum time for charging phase leaving the batteries undercharged due to a sulfated or faulty battery.	Repeat the charging cycle and if the error code E03 reappears check battery or replace it.
SCt	Safety timer exceeded maximum charging time. Interrupts charging cycle.	Replace battery.
Srt	Possible internal short circuit.	Contact Service Center.

USING AN OFF-BOARD BATTERY CHARGER (OPTION)

FOR SAFETY: When servicing machine, the use of incompatible battery chargers may damage battery packs and potentially cause a fire hazard. Inspect charger cord regularly for damage.

1. Transport the machine to a well-ventilated area.
2. Park the machine on a flat, dry surface. Turn the key off and set the parking brake, if equipped.

FOR SAFETY: Before leaving or servicing machine, stop on level surface, set parking brake if equipped, turn off machine and remove key.

3. If charging wet (lead acid) batteries, check the fluid level before charging (See BATTERY MAINTENANCE).
4. Prop up the recovery tank for ventilation (Figure 51).



FIG. 51

5. Connect the charger's AC power supply cord into a properly grounded receptacle.
6. Connect the charger's DC cord into the machine's battery receptacle (Figure 52).



FIG. 52

7. The supplied charger will automatically begin charging and shut off when fully charged.

NOTE: The machine will not operate when charging.

FOR SAFETY: Do not disconnect the charger's DC cord from the machine's receptacle when the charger is operating. Arcing may result. If the charger must be interrupted during charging, disconnect the AC power supply cord first.

ADJUSTING SCRUB HEAD BRUSHES

To ensure optimum scrubbing performance periodically check the scrub head for proper adjustment.

FOR SAFETY: Before leaving or servicing machine, stop on level surface, set parking brake if equipped, turn off machine and remove key.

DISK MODEL

Tools required: Measuring device, 27mm wrench and 24mm wrench

1. With brushes installed, lower the scrub head and apply medium brush pressure.
2. Turn machine off and remove key.
3. From the center front and back of scrub head, measure the distance from the top edge of scrub head to the floor (Figure 53).



FIG. 53

4. If scrub head is not level, loosen the lock nut and turn the scrub head leveling screw to level. Tighten down the lock nut once head is level (Figure 54).



FIG. 54

CYLINDRICAL BRUSH MODEL

After installing a new set of cylindrical brushes check the brush pattern to ensure proper brush adjustment. Brushes that are not properly adjusted will result in premature wear and poor scrubbing performance (Figure 55).

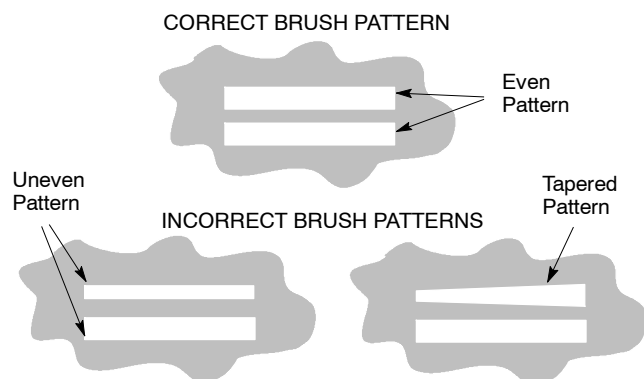


FIG. 55

To Inspect the Brush Pattern:

1. Position the machine on a dry dusty floor or apply a powdered substance, such as chalk.
2. Disconnect the drive motor wire connector to keep machine from moving forward (Figure 56).

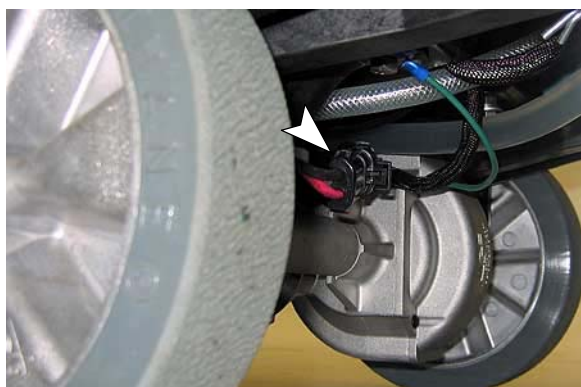


FIG. 56

3. Lower the scrub head to the floor and apply maximum brush pressure.
4. Shut off the solution flow.
5. Pull the control handle bail to create a brush pattern on the floor.
6. Raise the scrub head and pull the machine away.
7. Observe the brush pattern on floor. If the brush pattern is uneven or tapered, adjustment is required.
8. Reconnect drive motor wire.

To Adjust an Uneven Brush Pattern:

Tools required: Measuring device, 27mm wrench and 24mm wrench

1. Measure the distance from the front edge of the scrub head to the floor and from the back edge of the scrub head to the floor (Figure 57). The measurements should be the same.



FIG. 57

2. To level the scrub head, loosen the lock nut and turn the leveling screw clockwise to lower the rear of the scrub head or counter-clockwise to lower the front (Figure 58).

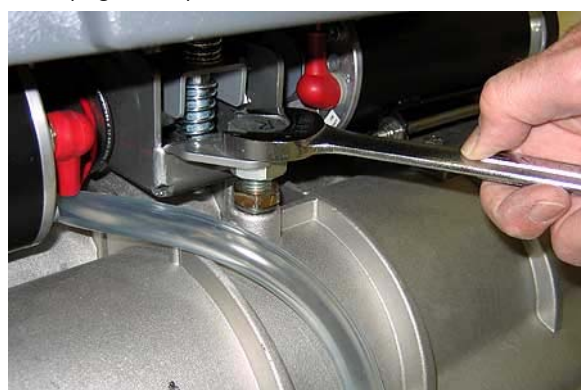


FIG. 58

3. Recheck brush pattern.

NOTE: Replace brushes when worn to 15mm.

OPERATION

To Adjust a Tapered Brush Pattern:

Tools required: 10mm wrench and 6mm hex wrench

1. Raise the scrub head off floor and remove key.
2. Remove the idler plate from the brush (Figure 59).



FIG. 59

3. Hold the brush plug shaft with a wrench and loosen the 6mm hex screw (Figure 60).



FIG. 60

4. To lower the brush end, turn the shaft clockwise for the front brush and counter-clockwise for the rear brush. Retighten hex screw (Figure 61).

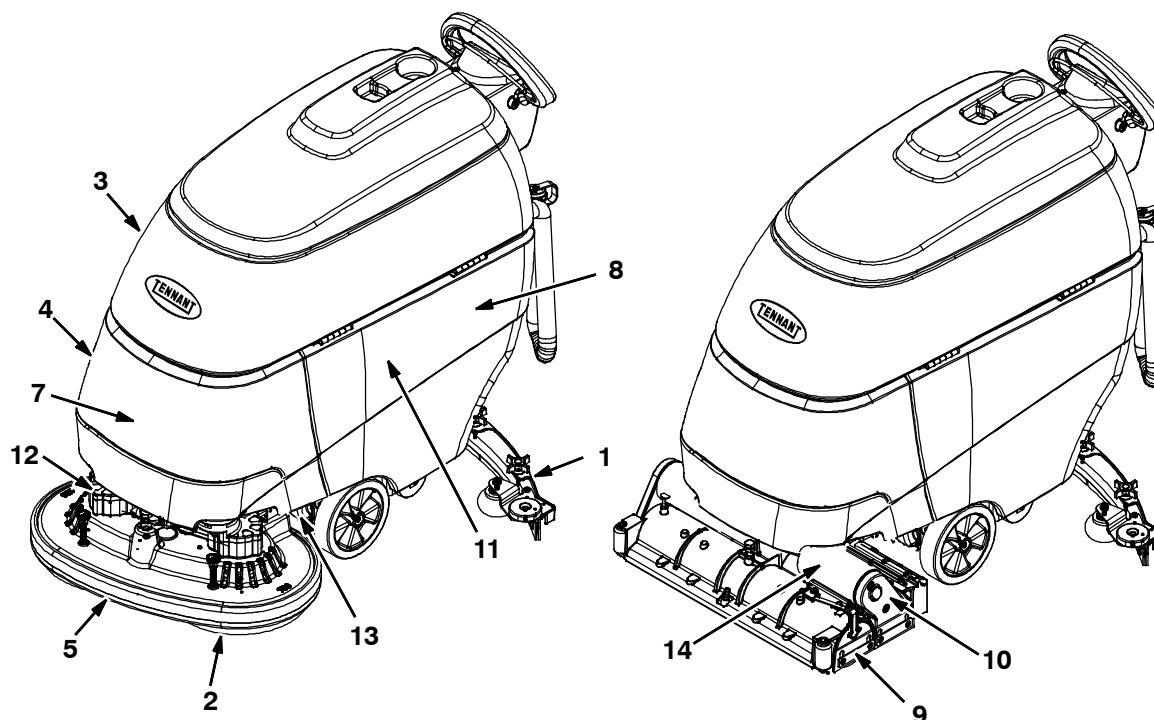


FIG. 61

5. Recheck brush pattern.

NOTE: Replace brushes when worn to 15mm.

MAINTENANCE CHART



O = Operator T = Trained Personnel

Interval/ Hours	Person Resp.	Key	Description	Procedure
Daily	O	1	Squeegee	Check for damage and wear
	O	2	Scrub brushes and pads	Check for damage and wear
	O	3	Recovery tank	Clean tank. Clean debris tray.
	O	4	Solution tank	Clean
	O		Machine	Check for leaks
	O	5	Disk scrub head skirt	Check for damage and wear
	O	6	Cylindrical scrub head skirt	Check adjustment. Check for damage and wear.
	O	7	FaST PAK supply hose and connector (option)	Clean and connect hose to storing plug when not in use
Weekly	O	8	Battery cells	Check electrolyte level
50 Hours	O	9	Cylindrical brushes	Check taper and rotate front to rear
100 Hours	O	10	Cylindrical scrub brush drive belts	Check tension
200 Hours	O	8	Battery terminals and cables	Check and clean
750 Hours	T	11	Vacuum fan motor	Replace carbon brushes
	T	12	Disk brush motors	Replace carbon brushes
	T	13	Propelling motor	Replace carbon brushes
1000 Hours	T	14	Cylindrical brush motors	Replace carbon brushes
	T	7	FaST water and air filters	Replace

MACHINE MAINTENANCE

To keep the machine in good working condition, it's important that the following maintenance procedures are performed on a routine basis.

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key and set parking brake if equipped.

FOR SAFETY: When servicing machine, wear personal protection equipment as needed.

DAILY MAINTENANCE (After Every Use)

1. Drain the recovery tank (Figure 62).



FIG. 62

2. Rinse and clean out the recovery tank (Figure 63).



FIG. 63

3. Remove the recovery tank float shut-off screen and clean (Figure 64).



FIG. 64

4. Remove the debris tray and empty (Figure 65)



FIG. 65

5. Drain the solution tank (Figure 66).



FIG. 66

6. Clean the solution tank filter (Figure 67).



FIG. 67

7. Rotate pad or replace when worn (Figure 68).

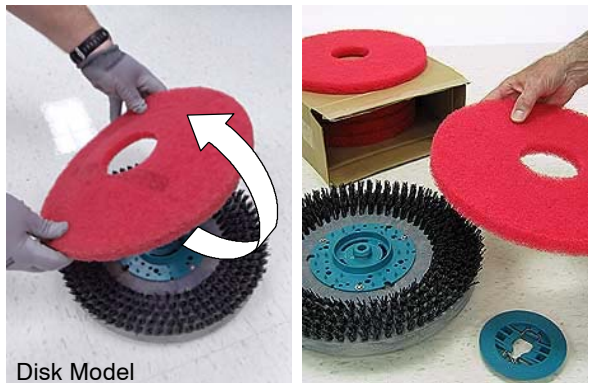



FIG. 68

8. Replace brushes when they no longer clean effectively or when the bristles are worn to the yellow indicator (Figure 69).



FIG. 69


9. Empty and rinse out the debris trough (Figure 70).

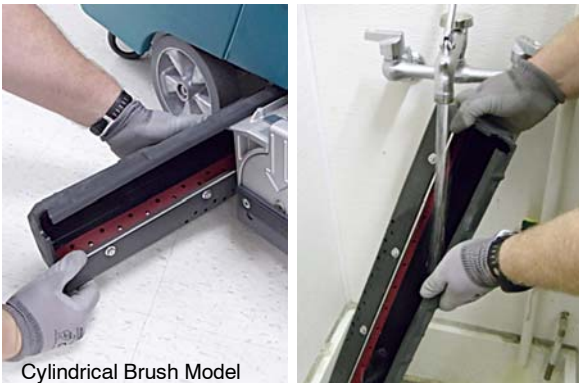

Cylindrical Brush Model

FIG. 70

10. Inspect the cylindrical brushes for wear. Rotate brushes from front- to- rear every 50 hours (Figure 71). Replace when worn to a length of 15mm.

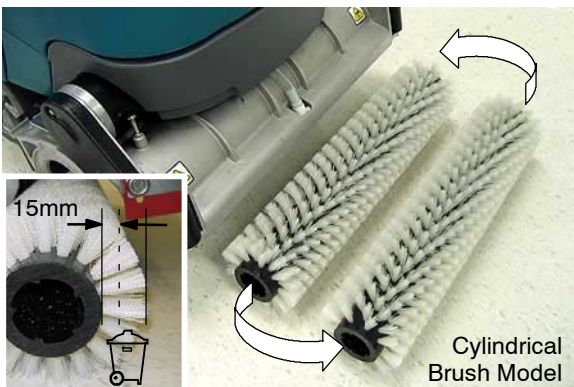

Cylindrical Brush Model

FIG. 71

11. Remove debris buildup from the underside of the cylindrical brush scrub head, including the idler plates and drive hubs (Figure 72).



Cylindrical Brush Model

FIG. 72

12. Wipe the squeegee blades clean (Figure 73). Store the squeegee assembly in the raised position to prevent blade damage.

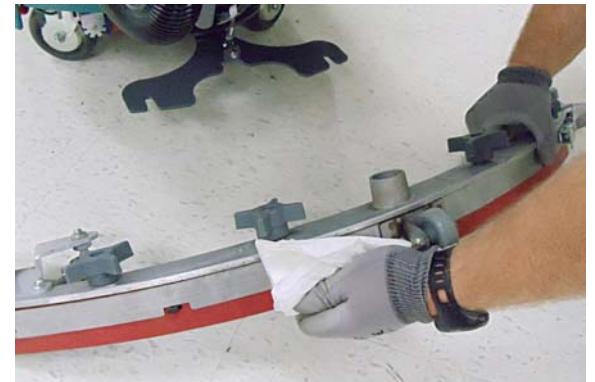


FIG. 73

13. Check the condition of the squeegee blade wiping edge (Figure 74). Rotate blade if worn (See SQUEEGEE BLADES).



FIG. 74

MAINTENANCE

14. Clean the machine with an all purpose cleaner and damp cloth (Figure 75).

FOR SAFETY: When servicing machine, do not power spray or hose off machine.



FIG. 75

15. Inspect the condition of the scrub head skirt, replace if worn or damaged (Figure 76).

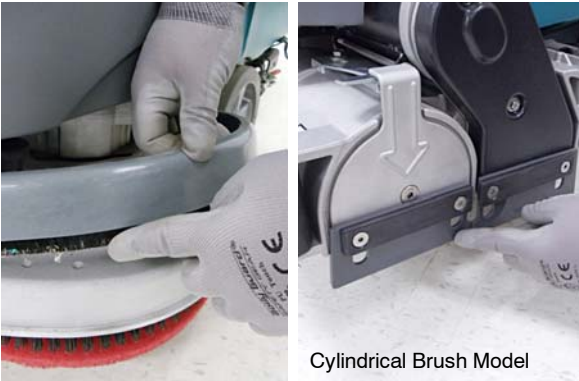


FIG. 76

16. FaST Model: Connect the FaST-PAK supply hose to the storage plug when not in use (Figure 77). Remove any dried concentrate from the hose connector by soaking it in warm water.

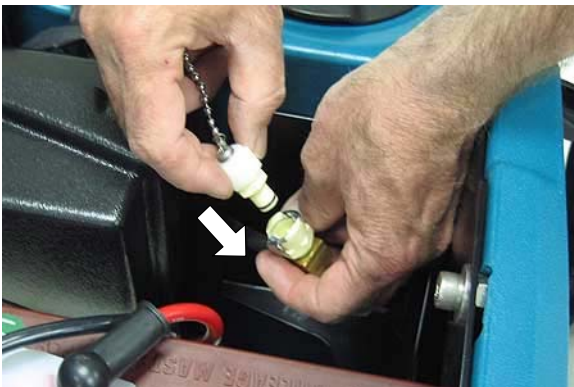


FIG. 77

17. Recharge the batteries (Figure 78). See CHARGING BATTERIES.



FIG. 78

18. Check the battery electrolyte level weekly (See BATTERY MAINTENANCE).
19. Clean wet/lead acid batteries to prevent corrosion and check for loose battery cable connections (See BATTERY MAINTENANCE).

MONTHLY MAINTENANCE

1. Periodically check the belt tension on the two brush motors. Tighten the belt if you're able to twist it beyond 90° at midpoint (Figure 79).

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key and set parking brake if equipped.

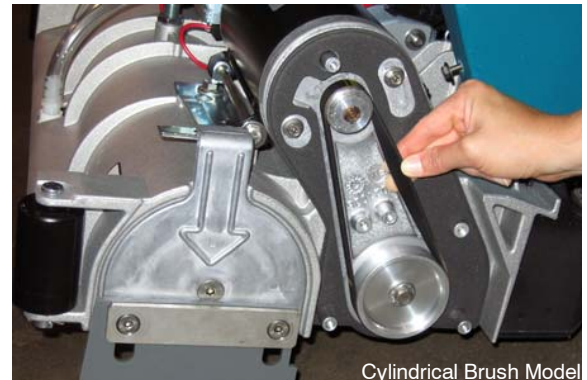


FIG. 79

2. Inspect and clean the recovery tank cover seal (Figure 80). Replace if damaged.



FIG. 80

3. Lubricate all pivot points and rollers with a water resistant grease.
4. Lubricate the casters with a water resistant grease (Figure 81).



FIG. 81

5. Clean the parking brake clamp with a cleaning solvent.
6. Check the machine for loose nuts and bolts.
7. Check the machine for leaks.

BATTERY MAINTENANCE

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key and set parking brake if equipped.

FOR SAFETY: When servicing machine, wear personal protection equipment as needed. Avoid contact with battery acid.

MAINTENANCE-FREE BATTERIES

Maintenance-free (Sealed AGM) batteries do not require watering. Cleaning and other routine maintenance is still required.

FLOODED (WET) LEAD-ACID BATTERIES

The flooded (wet) lead-acid batteries require routine watering as described below. Check the battery electrolyte level weekly.

The electrolyte level should be slightly above the battery plates as shown before charging (Figure 82). Add distilled water if low. **DO NOT OVERFILL.** The electrolyte will expand and may overflow when charging. After charging, distilled water can be added up to about 3 mm (0.12 in) below the sight tubes.

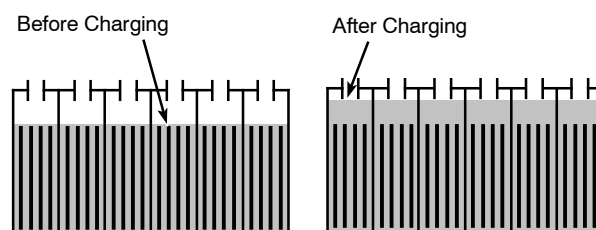
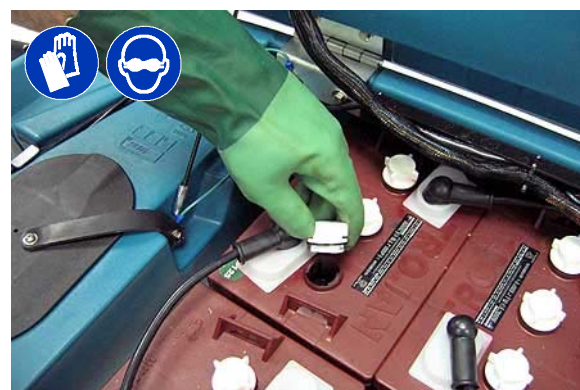


FIG. 82

NOTE: Make sure the battery caps are in place while charging. There may be a sulfur smell after charging batteries. This is normal.

CHECKING CONNECTIONS / CLEANING

After every 200 hours of use, check for loose battery connections and clean the surface of the batteries, including terminals and cable clamps to prevent battery corrosion. Use a scrub brush with a strong mixture of baking soda and water (Figure 83). Do not remove battery caps when cleaning batteries.



FIG. 83

SQUEEGEE BLADES

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key and set parking brake if equipped.

When the blades become worn, simply rotate the blades end-for-end or top-to-bottom to a new wiping edge. Replace blades when all edges are worn.

The front blades on the 700mm/800mm squeegee assemblies have 12/14 slots on one edge and 6 slots on the opposite edge (Figure 84). If making sharp turns with the cylindrical brush models use the 12/14 slotted edge for maximum water pickup.

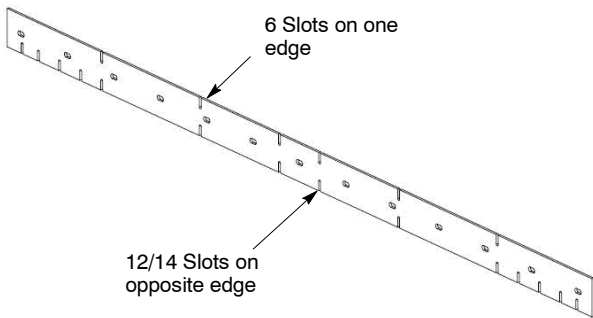


FIG. 84

Replacing Squeegee Blades:

1. Loosen the band clamp and remove the band from the squeegee assembly (Figure 85).

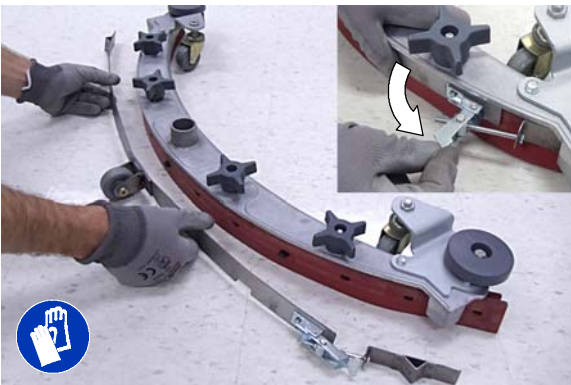


FIG. 85

2. Replace or rotate the rear blade to a new wiping edge and replace band (Figure 86).

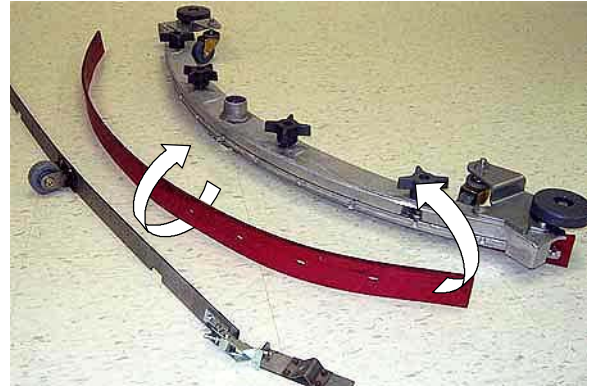


FIG. 86

3. To change the front blade, remove the band and loosen the four knobs. Replace or rotate the front blade to a new wiping edge (Figure 87).

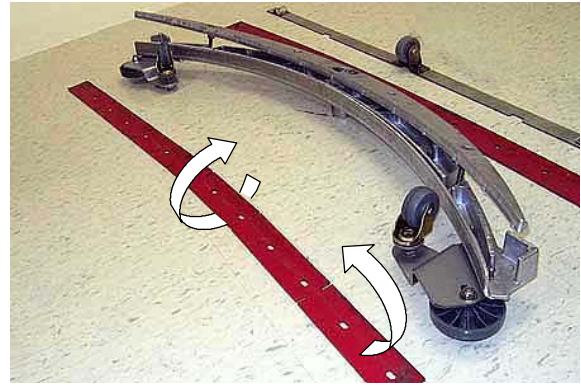


FIG. 87

MOTOR MAINTENANCE

Replace motor carbon brushes as indicated. Contact trained personnel for carbon brush replacement.

Carbon Brush Replacement	Hours
Drive Transaxle Motor	750
Vacuum Motor	
Disk Brush Motors	
Cylindrical Brush Motors	1000

FaST SYSTEM MAINTENANCE

Every 1000 hours replace the water filter and air filter located in the FaST detergent injector.

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key and set parking brake if equipped.

1. To access the detergent injector assembly, lower the scrub head and remove the front shroud (Figure 88)

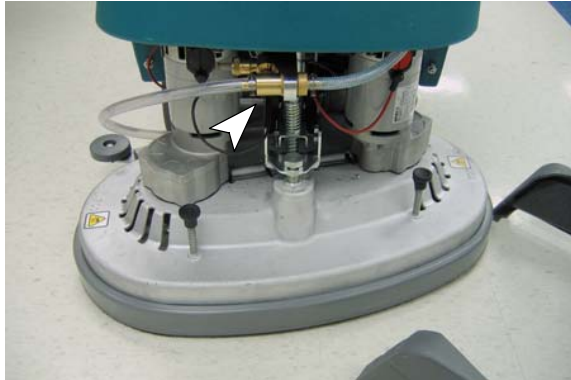


FIG. 88

2. Remove the injector assembly from clamps (Figure 89).

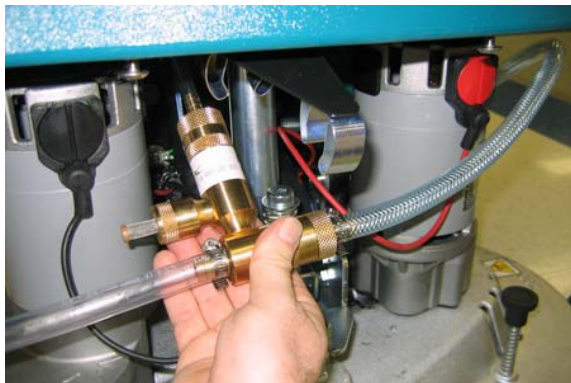


FIG. 89

3. Replace the water and air filter. An 8mm hex wrench is required to install the new water filter (Figure 90).

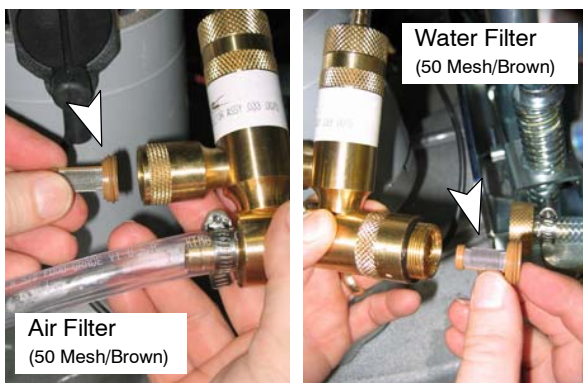


FIG. 90

ec-H2O NanoClean WATER CONDITIONING CARTRIDGE REPLACEMENT

(ec-H2O models labeled ec-H2O NanoClean)

The water conditioning cartridge is required to be replaced when it reaches its maximum water usage or expiration time of when the cartridge was activated, whichever comes first. The ec-H2O system indicator light will blink green/red when it's time to replace cartridge.

Depending on machine usage, on average, a new cartridge can last anywhere from 12 months for heavy machine usage to 24 months for light machine usage.

ATTENTION: During first time use and after replacing the water conditioning cartridge, the ec-H2O system will automatically override the selected solution flow rate for up to 75 minutes.

1. Park the machine on a level surface, lower scrub head and remove the key. Set parking brake, if equipped.
2. Remove front shroud to access cartridge. The cartridge is located behind the right side brush motor (Figure 91). Unfasten strap around cartridge and remove cartridge from holder.

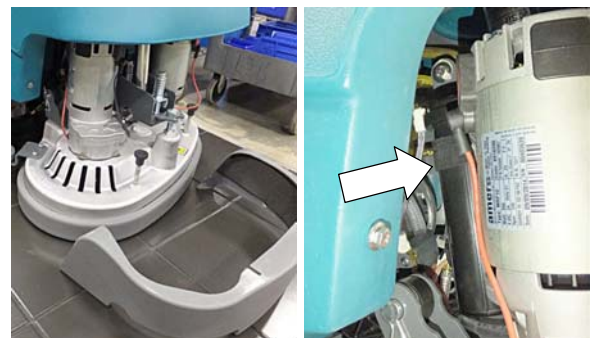


FIG. 91

3. Disconnect the two hose connectors from cartridge by pressing the gray collars inward and pulling the connectors outward (Figure 92).



FIG. 92

- Fill in the installation date on the new cartridge label (Figure 93).



FIG. 93

- Reconnect the two hoses to new cartridge and re-strap cartridge to holder. Make sure the hose connectors are fully inserted into new cartridge.
- Reset timer for new cartridge.

Carefully read and understand all steps first before performing procedure.

- Turn key on.
- Press and hold the service switch, located on the ec-H2O module, for 10 seconds. After releasing service switch, the three solution flow indicator lights will begin to (ripple) move back and forth (Figure 94).
- Within 5 seconds after releasing the service switch, while the three indicator lights are moving back and forth, quickly press and release the solution flow button located on ec-H2O module (Figure 94).

The three indicator lights will then blink three times to indicate timer has been reset.

Repeat process if the three indicator lights do not blink three times.

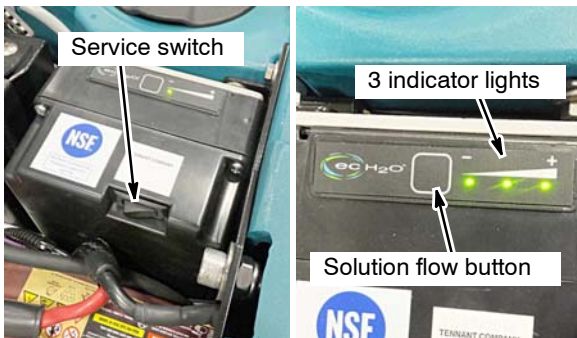


FIG. 94

ec-H2O MODULE FLUSH PROCEDURE

(ec-H2O models manufactured before ec-H2O NanoClean models)

This procedure is only required when an alarm sounds and the ec-H2O system indicator light begins to blink red.

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key and set parking brake if equipped.

- Drain the solution tank and recovery tank of all water.
- Pour 1 gallon (4 liters) of white or rice vinegar into the solution tank at full strength. Do not dilute. (p/n 1050552 - Vinegar, 2.5 gals/10 ltrs)

NOTE: Use white or rice vinegar only. The acidity level should be between 4-8%. Do not use other acids for this procedure.

- Disconnect the black connector fitting at the scrub head and place the hose into a bucket (Figure 95). To access the connector fitting, you may have to remove the front cover from the machine.



FIG. 95

- Turn the key to the on (I) position.
- Press and release the ec-H2O module flush switch to start the flush cycle (Figure 96). The module is located under the recovery tank.

NOTE: The module will automatically shut off when the flush cycle is complete (approx. 7 minutes). The module must run the full 7 minute cycle in order to reset the system indicator light and alarm.

Repeat flush procedure if the ec-H2O module does not reset. If module fails to reset, contact an Authorized Service Center.



FIG. 96

JACKING UP MACHINE

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key and set parking brake if equipped.

Use the designated locations to jack up the machine for service (Figure 97). Empty the recovery and solution tank and position the machine on a level before jacking.

FOR SAFETY: When servicing machine, jack machine up at designated locations only. Use jack or hoist that will support machine weight. Block machine up with jack stands.

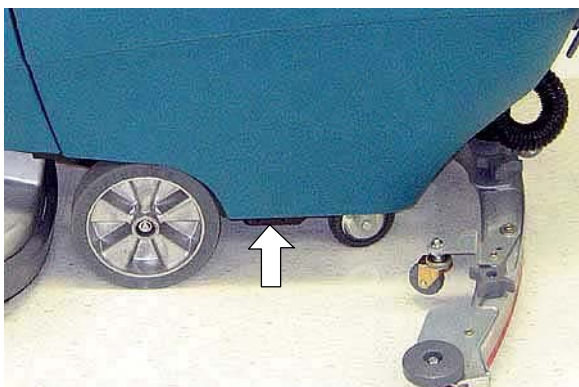


FIG. 97

TRANSPORTING MACHINE

When transporting the machine by trailer or truck, be certain to follow the transporting procedure below:

1. Drain machine tanks.
2. Load the machine using a ramp that can support the machine weight and person loading it.

FOR SAFETY: When loading/unloading machine onto/off truck or trailer, use a ramp, truck or trailer that will support the weight of the machine and operator. Use tie-down straps to secure machine to truck or trailer.

3. Position the front of machine up against the front of the trailer or truck. Lower the scrub head and squeegee.
4. Set the parking brake, if equipped, and place a block behind each wheel to prevent the machine from rolling.
5. Secure with tie-down straps as shown (Figure 98). It may be necessary to install tie-down brackets to trailer or truck.

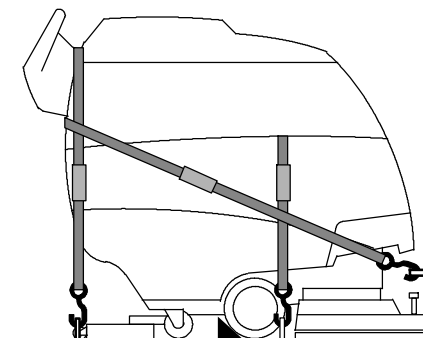


FIG. 98

STORING MACHINE

1. Charge the batteries before storing machine to prolong the life of the batteries. Recharge batteries once a month.
2. Disconnect batteries before storing.
3. Drain and rinse the tanks thoroughly.
4. Store the machine in a dry area with the squeegee and scrub head in the up position.
5. Open the recovery tank cover to promote air circulation.

ATTENTION: Do not expose machine to rain, store indoors.

6. If storing machine in freezing temperatures, follow the FREEZE PROTECTION instructions below.

FREEZE PROTECTION

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key and set parking brake if equipped.

1. Drain the solution tank and recovery tank of all water.
2. Pour 1 gallon (4 liters) of recreational vehicle (RV) antifreeze into the solution tank at full strength. Do not dilute.
3. Turn the machine power on and operate the solution flow system. Turn the machine off when the red RV antifreeze is visible.

If your machine is equipped with the off- aisle wand option, operate the the off- aisle wand for a few seconds to protect the pump.

Continue with the freeze protection procedure if machine is equipped with the *ec-H2O* system.

ec-H2O NanoClean Models: (*ec-H2O models labeled ec-H2O NanoClean*)

Operate machine in the *ec-H2O* mode to cycle antifreeze through *ec-H2O* system.

ec-H2O Models: (*ec-H2O models manufactured before ec-H2O NanoClean models*)

Press and release the flush switch on the *ec-H2O* module to cycle the antifreeze through *ec-H2O* system (Figure 99). When the antifreeze is visible, press the switch again to turn off the module.

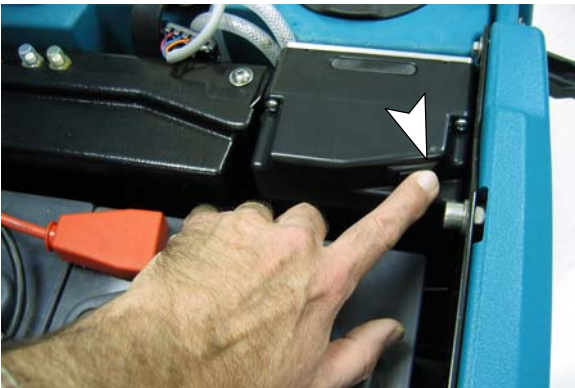


FIG. 99

IMPORTANT: Before operating machine, the antifreeze must be flushed from the module as described below.

If the antifreeze is not properly flushed from the *ec-H2O* system, the *ec-H2O* module may detect an error and not function (*ec-H2O* switch indicator light will turn red). If this occurs, reset key and repeat the flush procedure as described below.

Flushing antifreeze from *ec-H2O* module:

(*ec-H2O models manufactured before ec-H2O NanoClean models*)

1. Drain the antifreeze from the solution tank into a bucket.
2. Fill the solution tank with cool water until full (See FILLING SOLUTION TANK).
3. Disconnect the black connector fitting at the scrub head and place the hose into a bucket (Figure 100). To access the connector fitting, you may have to remove the front cover from the machine.



FIG. 100

4. Press and release the *ec-H2O* module switch to flush the antifreeze from the *ec-H2O* system (Figure 99). The module is located under the recovery tank.

When the water turns clear, press the module switch again to stop the flush cycle.

Dispose the antifreeze in an environmentally safe way according to local waste disposal regulations.

5. The machine is now ready for scrubbing.

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
Machine will not operate	Discharged batteries	Charge batteries
	Emergency- stop button activated	Turn button clockwise to reset
	Faulty battery(s)	Replace battery(s)
	Loose battery cable	Tighten loose cable
	Faulty control board	Contact Service Center
	Faulty key switch	Contact Service Center
	Machine fault detected.	See Control Panel Fault Indicator Codes
Onboard battery charger will not operate	Plug not connected to power supply	Check plug connection
	Faulty charger fuse	Replace charger fuse
	Faulty power supply cord	Replace cord
	Error detected.	See On- board Battery Charger Error Codes
Brush motor(s) will not operate	1-STEP scrub button is off	Turn on the 1-STEP scrub button
	Brush motor overload	See Control Panel Fault Indicator Codes
	Discharged batteries	Charge batteries
	Faulty control board	Contact Service Center
	Faulty scrub head (up/down) switch	Contact Service Center
	Faulty control handle bail switch	Contact Service Center
	Faulty brush motor or wiring	Contact Service Center
	Worn carbon brushes	Contact Service Center
	Broken or loose belt (cylindrical brush model)	Replace or tighten belt
Machine will not propel	Parking brake is set	Release parking brake lever
	Machine fault detected	See Control Panel Fault Indicator Codes
	Faulty control board	Contact Service Center
	Wheels raised off floor	Contact Service Center
	Faulty transaxle motor or wiring	Contact Service Center
	Worn carbon brushes	Contact Service Center
	Exceeded maximum incline	Avoid steep inclines and reset key

TROUBLESHOOTING - Continued

PROBLEM	CAUSE	SOLUTION
Vacuum motor will not operate	Squeegee is raised off floor	Lower squeegee
	Discharged batteries	Charge batteries
	Faulty control board	Contact Service Center
	Faulty vacuum motor or wiring	Contact Service Center
	Worn carbon brushes	Contact Service Center
Little or no solution flow	Solution tank is empty	Fill solution tank
	Clogged solution tank filter	Clean solution tank filter
	Discharged batteries	Charge batteries
	Clogged solution valve	Remove valve and clean
	Faulty control board	Contact Service Center
Poor water pickup	Recovery tank is full or excessive foam buildup	Drain recovery tank
	Loose drain hose cap	Tighten cap
	Clogged float shut-off screen located in recovery tank	Clean screen
	Clogged squeegee assembly	Clean squeegee assembly
	Worn squeegee blades	Replace or rotate squeegee blades
	Incorrect Squeegee blade deflection	Adjust Squeegee blade height
	Loose vacuum hose connections	Secure hose connections
	Clogged vacuum hose	Remove clogged debris
	Damaged vacuum hose	Replace vacuum hose
	Recovery tank cover not in place	Properly position cover
	Damaged recovery tank cover seal	Replace seal
	Faulty vacuum motor	Contact Service Center
Poor scrubbing performance	Debris caught in brush	Remove debris
	Worn brushes/pads	Replace brushes/pads
	Incorrect brush pressure setting	Adjust pressure setting
	Wrong brush/pad type.	Use correct brush/pad
Reduced run time	Batteries not fully charged	Fully recharge batteries
	Defective batteries	Replace battery
	Batteries need maintenance	See BATTERY MAINTENANCE
	Faulty battery charger	Repair or replace battery charger
Solution flow and brush pressure buttons and FaST system switch are locked	Supervisor controls are activated (lockout feature)	Contact your Supervisor

TROUBLESHOOTING - Continued

PROBLEM	CAUSE	SOLUTION
FaST Model: FaST System does not operate or operate correctly	FaST system switch is not turned on	Turn on FaST system switch
	FaST- PAK supply hose not connected	Connect supply hose
	Clogged FaST- PAK supply hose or connectors	Soak in warm water to unclog
	Empty FaST- PAK carton	Replace FaST- PAK carton
	Kink in FaST- PAK supply hose	Undo hose kink
	Clogged FaST solution system	Contact Service Center
	Faulty FaST system on/off switch	Contact Service Center
	Faulty pump	Contact Service Center
	Clogged solution tank filter	Drain solution tank. Remove solution tank filter, clean and reinstall
	Clogged detergent orifice/filter screen	Replace orifice/filter screen (See FaST SYSTEM MAINTENANCE)
	Clogged FaST solution inlet filter	Contact Service Center
Faulty control board	Contact Service Center	

ec-H2O NanoClean Models (ec-H2O models labeled ec-H2O NanoClean)

PROBLEM	CAUSE	SOLUTION
ec-H2O system indicator light blinking green/red	Water conditioning cartridge has expired	Replace cartridge (See ec-H2O NanoClean WATER CONDITIONING CARTRIDGE REPLACEMENT)
ec-H2O system indicator light is red or blinking* red	ec-H2O system fault has been detected	Contact Service Center


*Verify if cleaning detergent was added to solution tank. If ec-H2O system was operated with cleaning detergent, drain solution tank, add clear water and operate the ec-H2O system until the indicator light code clears.

ec-H2O Models (Manufactured before ec-H2O NanoClean models)

PROBLEM	CAUSE	SOLUTION
ec- H2O system indicator light blinks red and alarm sounds	Mineral deposit build- up in module	Flush module (See ec- H2O MODULE FLUSH PROCEDURE). If indicator light starts flashing within 1- 10 seconds, repeat flush procedure. If indicator light starts flashing after a minute of scrubbing, the water may have low conductivity.
	Low water conductivity	Add 17 ml of salt to every 85 L of water.
ec- H2O system indicator light solid red	Defective module	Contact Service Center
ec- H2O system indicator light does not turn on	Defective light or module	Contact Service Center
No water flow	Clogged module	Contact Service Center
	Defective solution pump	Replace solution pump

CONTROL PANEL FAULT INDICATOR CODES

The control panel fault indicator lights will display the following codes when the machine detects a fault.

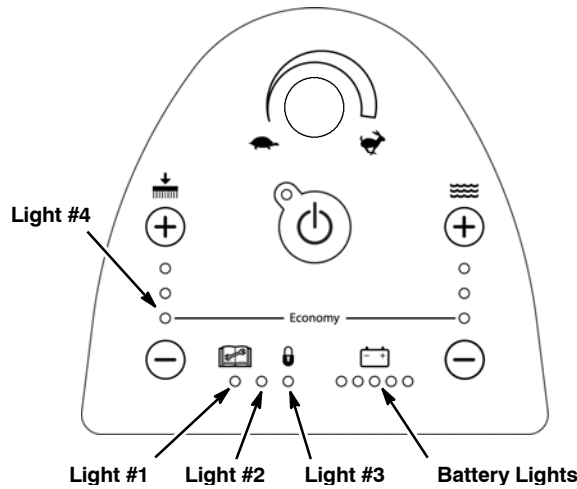

CODE	FAULT	SOLUTION
Light #1 blinks	Recovery tank is raised.	Lower recovery tank. Restart key to reset.
Lights #1, #2 and #3 ripple	Battery charger connected.	Disconnect battery charger. Restart key to reset.
Lights #1 and #4 blink	Left Brush motor overload.	Inspect brush for entangled debris, improper pad or contact service center. Restart key to reset.
Lights #3 and #4 blink	Right Brush motor overload.	Inspect brush for entangled debris, improper pad or contact service center. Restart key to reset.
Lights #2 and #3 blink	Propel motor overload. Exceeded maximum incline.	Avoid steep inclines or contact service center. Restart key to reset.
Lights #1 and #3 blink	Scrub head movement is obstructed or actuator motor malfunction.	Check scrub head for obstruction or contact service center. Restart key to reset.
Light #2 blinks	Vacuum motor malfunction.	Contact service center.
Lights #1 and #2 blink	Propel throttle malfunction.	Contact service center.
Light #3 blinks	FaST pump overload or malfunction.	Reset the 10A circuit breaker or contact service center. Restart key to reset.
Light #3 blinks when pressing the solution flow, brush pressure buttons and FaST system switch	Supervisor controls activated (lockout feature)	Contact your Supervisor.
Lights #1, #2 and #3 blink	Wand Pump overload or malfunction.	Reset the 10A circuit breaker button or contact service center. Restart key to reset.
All battery lights blink	Emergency- Stop button activated	Turn button clockwise to reset.
All battery lights ripple	Key turned on while bail was engaged.	Release the control handle start bail.

GENERAL MACHINE DIMENSIONS/CAPACITIES/PERFORMANCE

MODEL	Disk, 600 mm	Disk, 700 mm	Disk, 800 mm	Cylindrical, 650 mm	Cylindrical, 800 mm
LENGTH	1,346 mm	1,400 mm	1,463 mm	1,387 mm	1,387 mm
WIDTH	645 mm	737 mm	838 mm	711 mm	864 mm
HEIGHT	1,120 mm				
MINIMUM AISLE TURN	1,346 mm	1,499 mm	1,626 mm	1,575 mm	1,638 mm
WEIGHT	143 kg	165 kg	171 kg	162 kg	166 kg
WEIGHT WITH BATTERIES	263 kg	276 kg	282 kg	281 kg	285 kg
RECOVERY TANK CAPACITY	102 L				
SOLUTION TANK CAPACITY	85 L				
DRIVE SYSTEM	Transaxle, 24 V, .19 kW				
TRAVEL SPEED, MAXIMUM	Cleaning: 67 m/min Transporting: 72 m/min				
PRODUCTIVITY RATE Theoretical	2,450 m ² /h	2,860 m ² /h	3,270 m ² /h	2,660 m ² /h	3,270 m ² /h
PRODUCTIVITY RATE Estimated Actual	1,660 m ² /h	1,930 m ² /h	2,230 m ² /h	1,785 m ² /h	2,230 m ² /h
CLEANING PATH WIDTH	600 mm	700 mm	800 mm	650 mm	800 mm
BRUSH DIAMETER	302 mm	353 mm	404 mm	151 mm	151 mm
BRUSH PRESSURE	18/36/54 kg				
SOLUTION FLOW RATE - Low:	1.70 L/min	1.90 L/min		1.70 L/min	1.90 L/min
SOLUTION FLOW RATE - Med:	1.30 L/min	1.51 L/min		1.30 L/min	1.51 L/min
SOLUTION FLOW RATE - Max:	.95 L/min	1.14 L/min		.95 L/min	1.14 L/min
SQUEEGEE WIDTH	908 mm standard	1,051 mm standard	1,185 mm standard	1,051 mm	1,185 mm
	800 mm	908 mm	1,051 mm		
BRUSH MOTOR	Qty 2, .55kW, 220 rpm, 24 V, 29 A			Qty 2, .47 kW, 1,500 rpm, 24V, 23 A	
VACUUM MOTOR	640 W, 3- stage 5.7, 24 V, 26 A				
WATER LIFT/AIR FLOW	5 5mm H ₂ O/ 32.4 L ³ /min				
BATTERIES	Qty 4, 6 V				
RUN TIME	Minimum 3.5 h / Maximum 4.75 h				
BATTERY CAPACITY	WET (lead acid) = 180 Ah@ 5 h rate, 200Ah @ 5 h rate Sealed (Gel)= 180Ah @ 5 h rate				
ONBOARD CHARGER	230 VAC, 5 A, 50/60 Hz, 24 VDC, 20 A output				
TOTAL POWER CONSUMPTION	50 Amp nominal				
VOLTAGE DC	24 VDC				
PROTECTION GRADE	IPX3				
SOUND PRESSURE LEVEL L _{pA} *	65 dBa			64 dBa	
SOUND UNCERTAINTY K _{pA} *	3 dBa			3 dBa	
SOUND POWER LEVEL L _{WA} +UNCERTAINTY K _{WA} *	84 dBa			83 dBa	
VIBRATION AT HAND- ARM*	<2.5 m/s ²			<2.5 m/s ²	
GRADE LEVEL, MAX.	Scrubbing 5%, Transporting 8%, Ramp Loading (tanks empty) 19.5%				

* Values per EN 60335- 2- 72


SPECIFICATIONS

FaST SYSTEM	Disk, 600 mm	Disk, 700 mm	Disk, 800 mm	Cylindrical, 650 mm	Cylindrical, 800 mm
PRODUCTIVITY RATE Estimated Actual	1,865 m ² /h	2,115 m ² /h	2,440 m ² /h	1,950 m ² /h	2,440 m ² /h
SOLUTION PUMP	24 Volt DC, 3.5 A, 5.6 L/min open flow, 4.13 Bar bypass setting				
SOLUTION FLOW RATE	0.57 L/min	0.83 L/min		0.57 L/min	0.83 L/min
CONCENTRATE FLOW RATE	0.57 cc/min	0.83 cc/min		0.57 cc/min	0.83 cc/min
CONCENTRATE TO WATER DILUTION RATIO	1:1000				

ec-H2O SYSTEM	Disk, 600 mm	Disk, 700 mm	Disk, 800 mm	Cylindrical, 650 mm	Cylindrical, 800 mm
PRODUCTIVITY RATE Estimated Actual	1.865 m ² h	2.115 m ² h	2.440 m ² h	1.950 m ² h	2.440 m ² h
SOLUTION PUMP	24 Volt DC, 3,5 A, 5,6 L/min open flow, 4,13 Bar bypass setting				
SOLUTION FLOW RATE *	0,57 L/min (standard)	0,83 L/min (standard)		0,83 L/min (standard)	1,25 L/min (standard)
	0,83 L/min (optional)	1,25 L/min (optional)		1,14 L/min (optional)	1,67 L/min (optional)
	1,14 L/min (optional)	1,67 L/min (optional)			

* ec-H2O models manufactured before ec-H2O NanoClean models - If the optional solution flow rates are required, contact an Authorized Service Center.

MACHINE DIMENSIONS

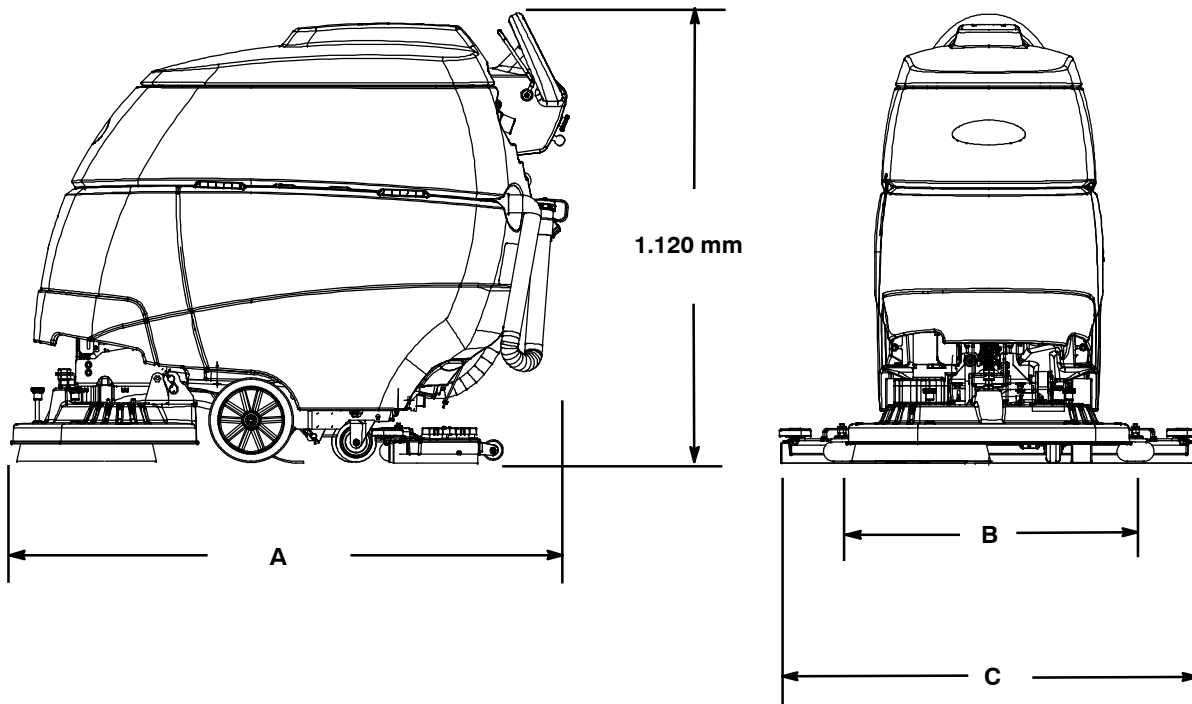

Models:	600 mm Disk	700 mm Disk	800 mm Disk	650 mm Cylindrical	800 mm Cylindrical
A =	1.346 mm	1.400 mm	1.463 mm	1.387 mm	1.387 mm
B =	645 mm	737 mm	838 mm	711 mm	864 mm
C =	908 mm	1.051 mm	1.185 mm	1.051 mm	1.185 mm